



Funktionsübersicht 33611 : General Air-Modul Graupner HoTT mit Vario

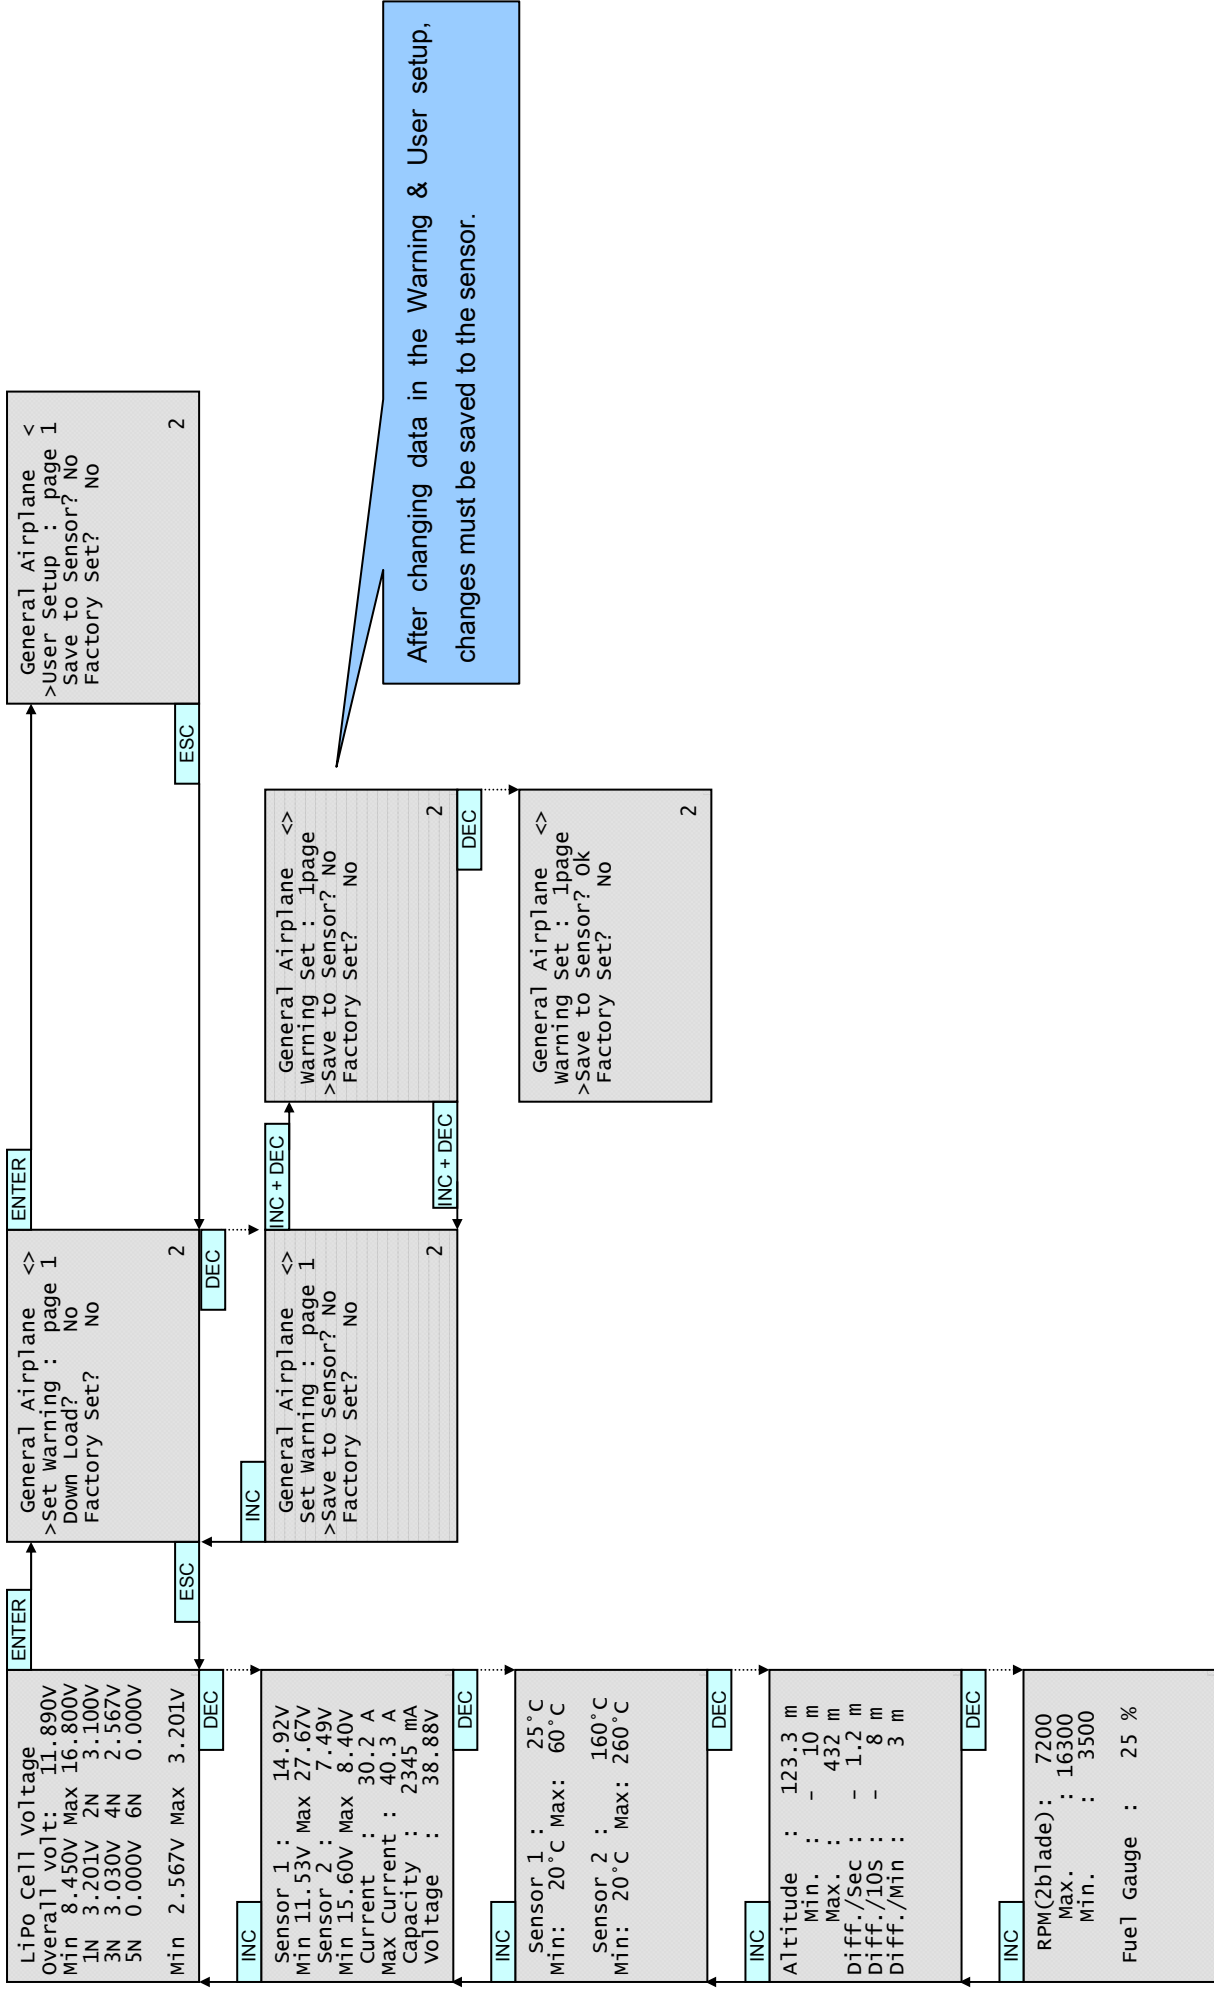

Warning Set & User Set Up

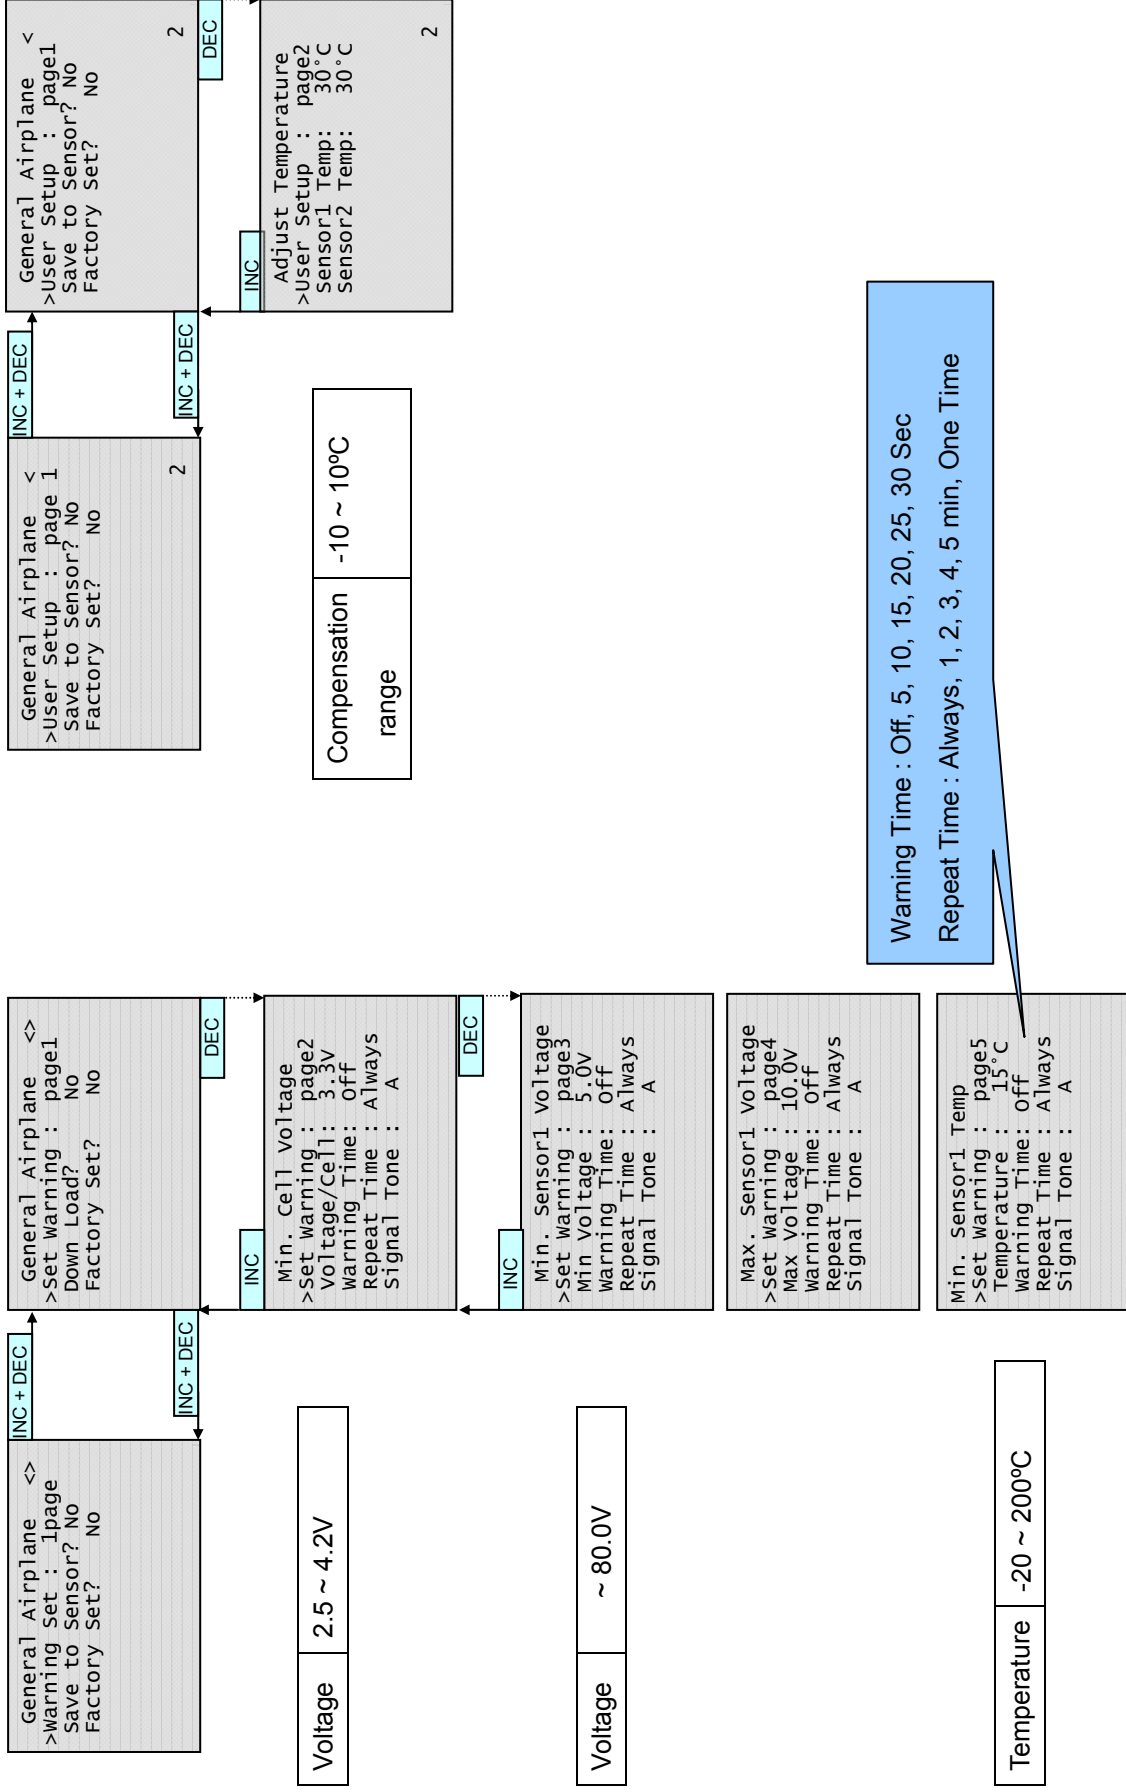

Max. Sensor1 Temp
>Set warning : page6
Temperature : 30°C
Warning Time : Off
Repeat Time : Always
Signal Tone : A

Min. Sensor2 Voltage
>Set warning : page7
Min. Voltage : 5.0V
Warning Time : Off
Repeat Time : Always
Signal Tone : A

Max. Sensor2 Voltage
>Set warning : page8
Max. Voltage : 10.0V
Warning Time : Off
Repeat Time : Always
Signal Tone : A

Min. Sensor2 Temp
>Set warning : page9
Temperature : 15°C
Warning Time : Off
Repeat Time : Always
Signal Tone : A

Max. Sensor2 Temp
>Set warning : page10
Temperature : 30°C
Warning Time : Off
Repeat Time : Always
Signal Tone : A

Max. Current
>Set warning : page11
Max Current : 10A
Warning Time : Off
Repeat Time : Always
Signal Tone : A

Current ~ 50 A

Capacity ~ 30000 mAh

```
Max. Used Capacity
>Set warning : page12
Max Capacity: 50mA
Warning Time: Off
Repeat Time: Always
Signal Tone : A
```

Height -500 ~ 3000 m

```
Min. Height
>Set warning : page15
Min height : 70m
Warning Time: Off
Repeat Time: Always
Signal Tone : A
```

-Diff/Sec -50 ~0 m

```
Negative Difference 1
>Set warning : page17
Diff / Sec : 0.3 m
Warning Time: Off
Repeat Time: Always
Signal Tone : A
```

```
Max. External Voltage
>Set warning : page14
Max. Voltage: 10.0V
Warning Time: Off
Repeat Time: Always
Signal Tone : A
```

```
Max. Height
>Set warning : page16
Max height : 100m
Warning Time: Off
Repeat Time: Always
Signal Tone : A
```

```
Min. External Voltage
>Set warning : page13
Min Voltage : 5.0V
Warning Time: Off
Repeat Time: Always
Signal Tone : A
```

-Diff/10Sec	-500 ~ 0 m
-------------	------------

```
Negative Difference 2
>Set Warning : page18
Diff / 10sec : - 30 m
Warning Time : Off
Repeat Time : Always
Signal Tone : A
```

Diff/Sec	0 ~ 50 m
----------	----------

```
Positive Difference 1
>Set Warning : page19
Diff / Sec : 0.8 m
Warning Time : Off
Repeat Time : Always
Signal Tone : A
```

Diff/10Sec	0 ~ 500 m
------------	-----------

```
Positive Difference 2
>Set Warning : page20
Diff / 10s : 30 m
Warning Time : Off
Repeat Time : Always
Signal Tone : A
```

Cont. Vario	0.3m / 1m / 3m
-------------	----------------

```
Continuous Vario
>Set Warning : page21
Diff / s : 0.3m Off
Beep: Off
Altitude level1: off
Beep:
```

Altitude level beep:
25/50/75/100 m low tone 1 ... 4 times
250/500/750/1000 m high tone 1 ... 4 times

RPM	0 ~ 200000
-----	------------

```
Minimum RPM
>Set Warning : page22
Blade Number: 2
Minimum rpm : 500
Warning Time : Off
Repeat Time : Always
Signal Tone : A
```

Maximum RPM
>Set warning : page23
Maximum rpm : 7000
Warning Time : Off
Repeat Time : Always
Signal Tone : A

Minimum Fuel
>Set warning : page24
Minimum Fuel : 50 %
Warning Time : Off
Repeat Time : Always
Signal Tone : A

Fuel	0~ 100%(25%)
------	--------------

