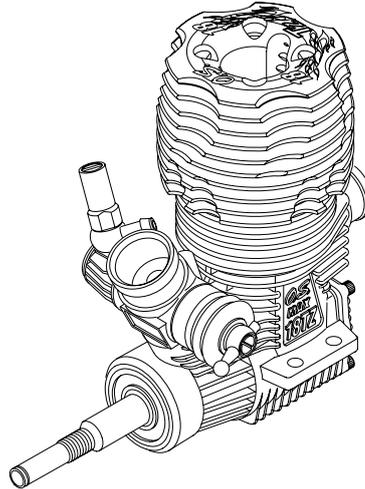


**OWNER'S INSTRUCTION MANUAL**

It is of vital importance, before attempting to operate your engine, to read the general '**SAFETY INSTRUCTIONS AND WARNINGS**' section on pages 2-5 of this booklet and to strictly adhere to the advice contained therein.

- Also, please study the entire contents of this instruction manual, so as to familiarize yourself with the controls and other features of the engine.
- Keep these instructions in a safe place so that you may readily refer to them whenever necessary.
- It is suggested that any instructions supplied with the vehicle, radio control equipment, etc., are accessible for checking at the same time.

**CONTENTS**

SAFETY INSTRUCTIONS AND WARNINGS ABOUT YOUR O.S. ENGINE .....	2-5	FINAL ADJUSTMENT, CARBURETOR CLEANLINESS .....	21-23
ENGINE CONSTRUCTION, NOTES WHEN APPLYING AN ELECTRIC STARTER .....	6-7	CARE AND MAINTENANCE, CHECKING THE ENGINE .....	24-25
18TZ SERIES INSTRUCTIONS .....	8	TROUBLE SHOOTING .....	26-29
TOOLS, ACCESSORIES, etc. ....	9-10	ENGINES EXPLODED VIEW & PARTS LIST .....	30-37
BASIC ENGINE PARTS, CARBURETOR CONTROLS (11K), (11L) .....	11-13	CARBURETOR EXPLODED VIEW & PARTS LIST .....	38-41
GLOWPLUG, INSTALLATION, NOTES CONCERNING THE RECOIL STARTER .....	14-16	O.S. GENUINE PARTS & ACCESSORIES .....	42-44
PRESSURIZED FUEL SYSTEM, STARTING THE ENGINE & RUNNING-IN ('Breaking-in') .....	17-20	THREE VIEW DRAWING .....	45-48

## SAFETY INSTRUCTIONS AND WARNINGS ABOUT YOUR O.S. ENGINE

Remember that your engine is not a "toy", but a highly efficient internal-combustion machine whose power is capable of harming you, or others, if it is misused.

As owner, you, alone, are responsible for the safe operation of your engine, so act with discretion and care at all times.

If at some future date, your O.S. engine is acquired by another person, we would respectfully request that these instructions are also passed on to its new owner.

■ The advice which follows applies basically to ALL MODEL ENGINES and is grouped under two headings according to the degree of damage or danger which might arise through misuse or neglect.

 <b>WARNINGS</b>
<p>These cover events which might involve serious (in extreme circumstances, even fatal) injury.</p>

 <b>NOTES</b>
<p>These cover the many other possibilities, generally less obvious sources of danger, but which, under certain circumstances, may also cause damage or injury.</p>

 <b>WARNINGS</b>	
<ul style="list-style-type: none"> <li>• Model engine fuel is poisonous. Do not allow it to come into contact with the eyes or mouth. Always store it in a clearly marked container and out of the reach of children.</li> </ul>	
<ul style="list-style-type: none"> <li>• Model engine fuel is also highly flammable. Keep it away from an open flame, excessive heat, sources of sparks, or anything else which might ignite it. Do not smoke or allow anyone else to smoke, near to it.</li> </ul>	
<ul style="list-style-type: none"> <li>• Never operate your engine in an enclosed space. Model engines, like automobile engines, exhaust deadly carbon-monoxide. Run your engine only in an open area.</li> </ul>	
<ul style="list-style-type: none"> <li>• Model engines generate considerable heat. Do not touch any part of your engine until it has cooled. Contact with the muffler (silencer), cylinder head or exhaust header pipe, in particular, may result in a serious burn.</li> </ul>	



## NOTES

- This engine is intended for model cars. Do not attempt to use it for any other purpose.
- Mount the engine in your model securely, following the manufacturers' recommendations, using appropriate screws and locknuts.
- Fit an effective silencer (muffler). Frequent close exposure to a noisy exhaust (especially in the case of the more powerful highspeed engines) may eventually impair your hearing and such noise is also likely to cause annoyance to others over a wide area.
- The wearing of safety glasses is also strongly recommended.
- Take care that the glowplug clip or battery leads do not come into contact with rotating parts. Also check that the linkage to the throttle arm is secure.
- For their safety, keep all onlookers (especially small children) well back (at least 20 feet or 6 meters) when preparing your model for running.
- Before starting the engine, always check the tightness of all the screws and nuts especially those of joint and movable parts such as throttle arm. Missing retightening the loose screws and nuts often causes the parts breakage that is capable of harming you.




## NOTES

- To stop the engine, fully retard the throttle stick and trim lever on the transmitter, or, in an emergency, cut off the fuel supply by pinching the fuel delivery line from the tank.
- Do not attempt to disassemble the recoil starter of the 18TZ-TX. If you do so, the very strong spring inside will be suddenly ejected. This can be very dangerous.
- Do not extend the starter cord more than 40cm (16"). Do not abruptly release the operating handle. Allow the cord to rewind smoothly while still holding the handle.
- Pull the operating handle straight out when starting the engine, so that the cord does not rub against the vehicle body or engine. This will help prevent the cord from being damaged by abrasion or engine heat.
- Warning! Immediately after a glowplug-ignition engine has been run and is still warm, conditions sometimes exist whereby it is just possible for the engine to abruptly restart if it is rotated over compression WITHOUT the glowplug battery being reconnected.

### ENGINE CONSTRUCTION

With this engine, the piston will feel tight at the top of its stroke (TDC) when the engine is cold. This is normal. The cylinder bore has a slight taper. The piston and cylinder are designed to achieve a perfect running clearance when they reach operating temperature.

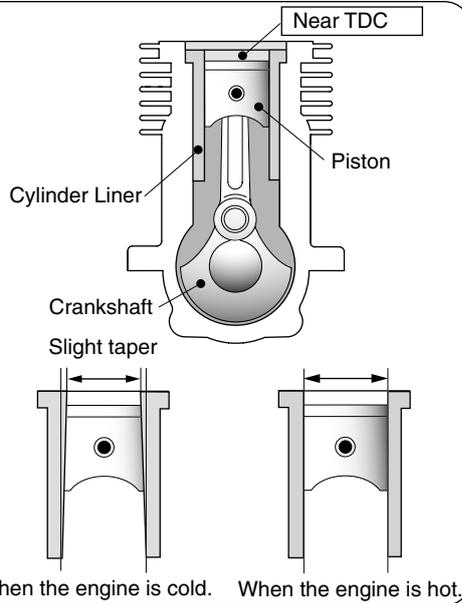


6

### NOTES WHEN APPLYING AN ELECTRIC STARTER

Do not over-prime. This could cause a hydraulic lock and damage the engine on application of the electric starter.

If over-primed, remove glowplug, close needle-valve and apply starter to pump out surplus fuel. Cover the head with a rag to prevent pumped out fuel getting into your eyes.

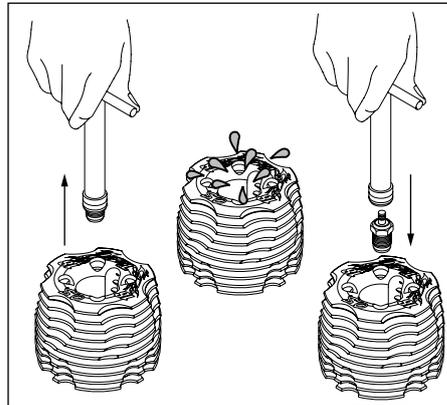

#### NOTE

As delivered, the engine has the carburetor lightly fit into its intake. Secure it changing its angle according to the car chassis.

7

## MAX-18TZ SERIES INSTRUCTIONS

This manual handles the following four versions.

MAX-18TZ-T with 11L carburetor

MAX-18TZ(S)-T with 11L carburetor

MAX-18TZ-TX with 11L carburetor

MAX-18TZ(P)-T with 11K carburetor

### About the engine

The 18TZ series engines have been developed for 1/10 class stadium trucks, off-road vehicles and sport cars. All the engine are supplied with T type P3 plug. 18TZ-TX is equipped with a newly developed O.S. No. N1 recoil starter.

### Standard accessories

• Glow Plug P3 T-type head (Turbo head)  
1piece  
(Hot Type)



• Exhaust Seal Ring 1piece



### About Head Gasket

These engines are fit with two head gaskets 0.1mm thick and 0.2mm thick. It is suggested to adjust the total thickness according to atmospheric temperature, humidity and glowplug used.

- At early stage of running-in, when a glowplug tends to burn out early or when high nitromethane content fuel is used, try to run the engine as it is or removing the 0.1mm gasket.
- When low nitromethane content fuel is used, try to run the engine removing the 0.2mm gasket.

8


## TOOLS, ACCESSORIES, etc.

The following items are necessary for operating the engine.

### ■ Items necessary for starting

#### FUEL

Generally, it is suggested that the user selects a fuel that is commercially available for model two-stroke engines and contains 10-30% nitromethane. As a starting point, we recommend a fuel containing 20% nitromethane, changing to a fuel containing more nitro if necessary. When the brand of fuel is changed, or the nitro content increased, it is advisable to repeat the running-in procedure referred to in the RUNNING-IN paragraphs. Please note that with high-nitro fuels, although power may be increased for competition purposes, glowplug elements do not last as long and engine life will be shortened.

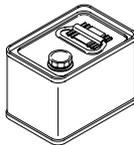

### REMINDER!




**Model engine fuel is poisonous. Do not allow it to come into contact with the eyes or mouth. Always store it in a clearly marked container and out of the reach of children.**



**Model engine fuel is also highly flammable. Keep it away from open flame, excessive heat, sources of sparks, or anything else which might ignite it. Do not smoke or allow anyone else to smoke, near to it.**


### FUEL FILTER

To be installed in the fuel line between fuel tank and carburetor to prevent dust from entering the carburetor.

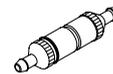

### GLOWPLUG IGNITER


Commercially available handy glowplug heater in which the glowplug battery and battery leads are integrated.

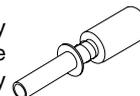

9


### STARTER BOX

For starting the engine. It is not necessary for the recoil starter version-i.e. 18TZ-TX.

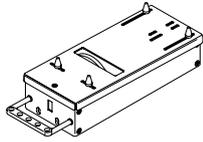

### 7.2V BATTERIES FOR STARTER BOX

Batteries for starter box. Select according to the starter box used. Be sure to full charge before using.

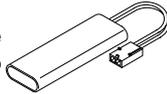


### FUEL PUMP

For filling the fuel tank, a simple, polyethylene "squeeze" bottle, with a suitable spout, is required.



### SILICONE FUEL LINE

Heatproof silicone tubing of approx. 5mm o.d. and 2mm i.d. is required for the connection between the fuel tank and engine.

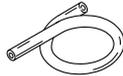

### ■ TOOLS


#### HEX SCREWDRIVER

Necessary for engine installation. 1.5mm, 2mm, 2.5mm, 3mm




#### SCREWDRIVER

Necessary for carburetor adjustments. No.1, No.2, etc

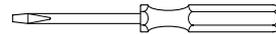


#### LONG SOCKET WRENCH WITH PLUG GRIP

Recommended for easy removal and replacement of the angled and recessed glowplug, the O.S.Long Socket Wrench incorporates a special grip.

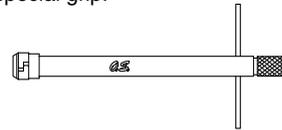


## BASIC ENGINE PARTS

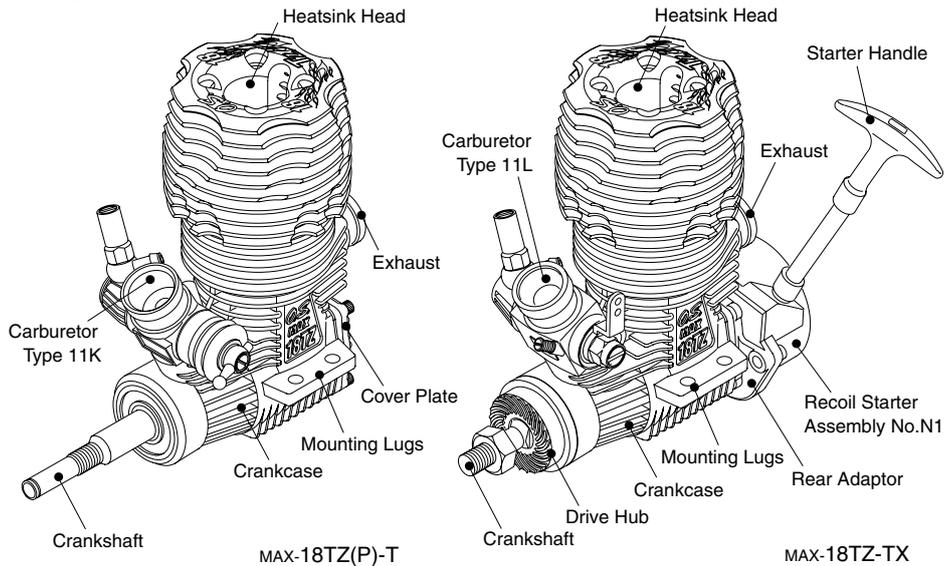

---

## CARBURETOR CONTROLS (11K)

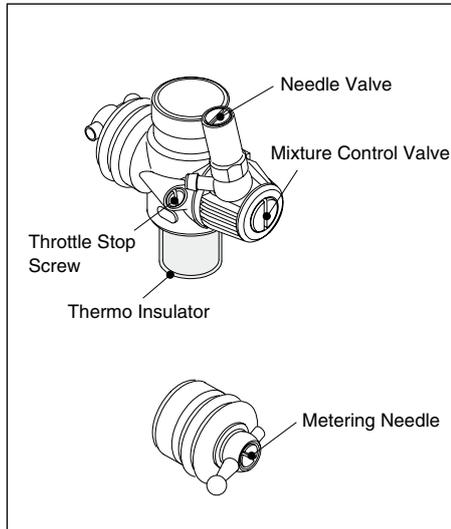

Four adjustable controls are provided on this carburetor.


- **The Needle-Valve:**  
For adjusting the mixture strength when the throttle is fully open.
- **The Mixture Control Valve:**  
For changing the mixture strength at mid speed and acceleration. (Do not rotate the screw more than one turn.)
- **The Metering Needle:**  
For adjusting the mixture strength at part-throttle and idle speed, to obtain steady idling and smooth acceleration to mid speed.
- **The Throttle Stop Screw:**  
For setting the minimum idle speed:

**NOTE:** Readjustment may be necessary, occasionally to allow for changes in fuel formula, gear ratio or clutch engagement point.

12

---

## CARBURETOR CONTROLS (11L)

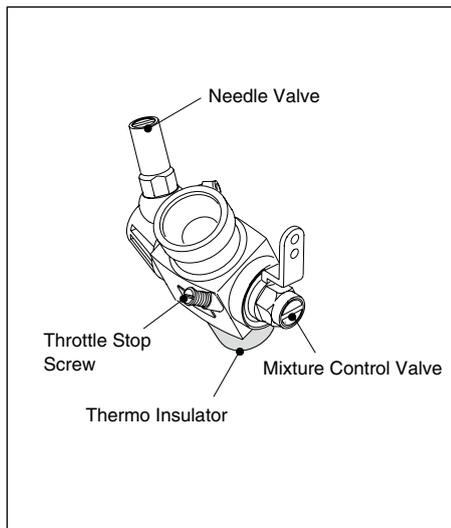

Three adjustable controls are provided on this carburetor.

- **The Needle-Valve:**  
For adjusting the mixture strength when the throttle is fully open.
- **The Mixture Control Screw:**  
For adjusting the mixture strength at part-throttle and idle speed, to obtain steady idling and smooth acceleration to mid speed.
- **The Throttle Stop Screw:**  
For setting the minimum idle speed:

**NOTE:** Readjustment may be necessary, occasionally to allow for changes in fuel formula, gear ratio or clutch engagement point.

13

---

## GLOWPLUG

Since the compatibility of the glowplug and fuel may have a marked effect on performance and reliability, it may be worthwhile to choose the R/C type plug found most suitable after tests. Recommended O.S. plugs are P3 and P6. Carefully install plug finger-tight, before final tightening with the correct size plug wrench.

### The role of the glowplug

With a glowplug engine, ignition is initiated by the application of a 1.5-volt power source. When the battery is disconnected, the heat retained within the combustion chamber remains sufficient to keep the plug filament glowing, thereby continuing to keep the engine running. Ignition timing is 'automatic' : under reduced load, allowing higher rpm, the plug becomes hotter and, appropriately, fires the fuel/air charge earlier; conversely, at reduced rpm, the plug become cooler and ignition is retarded.

### Glowplug life

Particularly in the case of very high performance engines, glowplugs must be regarded as expendable items. However, plug life can be extended and engine performance maintained by careful use, i.e.:

- Install a plug suitable for the engine.
- Use fuel containing a moderate percentage of nitromethane unless more is essential for racing events.
- Do not run the engine too lean and do not leave the battery connected while adjusting the needle.

### When to replace the glowplug

Apart from when actually burned out, a plug may need to be replaced because it no longer delivers its best performance, such as when:

- Filament surface has roughened and turned white.
- Filament coil has become distorted.
- Foreign matter has adhered to filament or plug body has corroded.
- Engine tends to cut out when idling.
- Starting qualities deteriorate.


14

---

## INSTALLATION OF THE CARBURETOR

As delivered, the engine has its carburetor lightly fit into the intake boss. Secure it as follows.

1. Loosen the retainer screw, rotate the carburetor to its correct position and make sure that it is pressed well down into the intake boss, compressing the rubber gasket, before retightening screw.
2. Rotate the retainer screw gently until it stops, then tighten a further 60-90°. Do not overtighten the screw as this will damage the carburetor body.

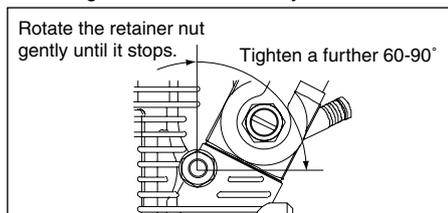


---

## ENGINE INSTALLATION

Make sure that the vehicle's engine mounting surfaces are level and in the same plane. Poor installation may cause distortion of the crankcase, bearings, etc., resulting in erratic running and loss of performance.

The recommended screws for securing the engine are 3mm or 4-40 steel Allen hexagon socket type.

If existing holes in the engine mount do not align perfectly with engine mounting lugs, enlarge them slightly with a needle-file so that screws are in alignment with the mounting holes.

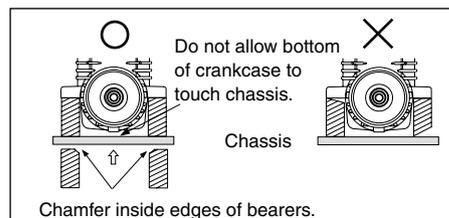


15

### ■ In case of the 18TZ-TX

Avoid forcing the screws. Secure with locknuts. If the bottom of the recoil starter housing would otherwise touch the car chassis, install the engine mount spacers (optional extra) between the engine's mounting lugs and the engine mount. With some vehicles, it may be necessary to make minor trimming modifications to chassis or body when installing the engine.

#### NOTE:

When spacers are supplied joined in pairs (see sketch) separate them as shown. Either face may be placed downwards.

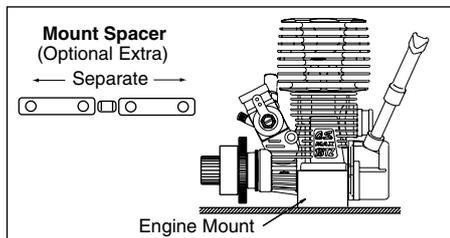

16

### NOTES CONCERNING THE RECOIL STARTER


(18TZ-TX ONLY)

#### REMINDER!

- ◆ Do not attempt to disassemble the recoil starter. If you do so, the very strong spring inside will be suddenly ejected. This can be very dangerous.
- ◆ Do not extend the starter cord more than 40cm (16"). Do not abruptly release the operating handle. Allow the cord to rewind smoothly while still holding the handle.
- ◆ Pull the operating handle straight out when starting the engine, so that the cord does not rub against the vehicle body or engine.
- ◆ This will help prevent the cord from being damaged by abrasion or engine heat.
- ◆ Try to avoid spilling fuel over the starter unit and its cord. Some fuels have a detrimental effect on these parts.
- ◆ The starter prevents the engine from being rotated in the wrong direction. The unit will be damaged if you attempt to force the flywheel in the opposite direction (i.e. clockwise when viewed from the crankshaft end).

### PRESSURIZED FUEL SYSTEM

- The somewhat violent changes of vehicle attitude that occur in off-road running, combined with the fact that, in buggy type cars, the fuel tank is often located some distance from the carburetor, means that fuel 'head' at the carburetor can vary and upset running. Therefore, it is recommended that a muffler pressurized fuel feed system be used.
- Never run your vehicle without installing the air cleaner. Dust and dirt that may otherwise be drawn into the engine will rapidly shorten its life.

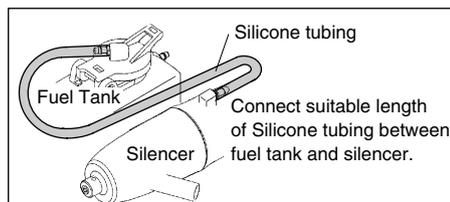


17

Before starting the engine, always check the tightness of all the screws and nuts especially those of joint and movable parts such as throttle arm.  Missing retightening the loose screws and nuts often causes the parts breakage that is capable of harming you.

### STARTING THE ENGINE & RUNNING-IN ('Breaking-in')


The following procedure is suitable for these engines when the O.S. T-1040 tuned silencer and a fuel containing up to 30% nitromethane are used.

- ◆ Fill the tank completely with fuel.
- ◆ Temporarily remove the glowplug to check that it glows bright red when energized.

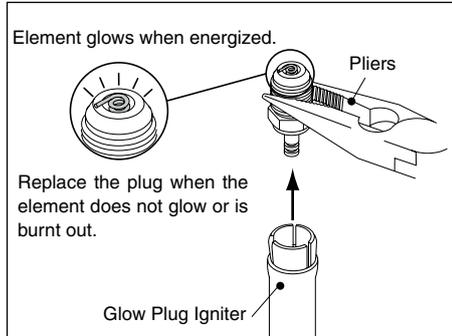


- ◆ Turn the needle-valve clockwise slowly until it stops. This is the fully closed position. Do not force it to turn further.

- ◆ Open the Needle-Valve 2 turns from the fully closed position.

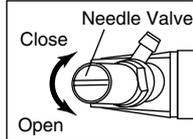


#### ■ In case of the 11K carburetor

Set the throttle-stop screw so that the minimum throttle opening (idle setting) is approximately 0.3-0.5mm.

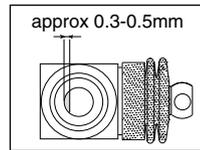

#### ■ In case of the 11L carburetor

Set the throttle-stop screw so that the minimum throttle opening (idle setting) is approximately 1.0mm.

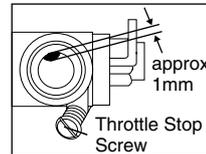


#### Note:

**Throttle opening at idle should be checked before installing an air cleaner.**

18


- ◆ Switch on the transmitter and make sure that each linkage moves correctly.

- ◆ Turn the engine with starter box to draw he fuel into the engine.

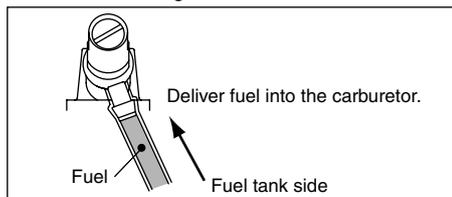

- ◆ Now connect glowplug battery lead to heat the plug filament and start the engine.

- ◆ When the engine starts, first allow it to operate in short runs at the very rich starting settings, with the glowplug battery still connected and the driving wheels clear of the ground. The rich mixture will, under these conditions, provide adequate lubrication and cooling, indicated by profuse smoke from the exhaust.

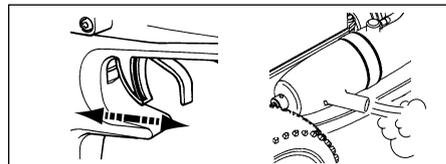

#### Attention:


**It is vitally important to set the throttle at the correct position before starting the engine. If the engine is allowed to run with the throttle too far open under "no load" conditions (i.e. with the driving wheels not in contact with the ground) it will rapidly over-heat and may be seriously damaged.**



- ◆ Next, disconnect the glowplug battery and try running the car on the track. If the engine stalls, open the throttle fractionally, but try to keep the engine running as rich as possible: if it stops because of being excessively over-rich, close the Needle-Valve 30° and try again.

19

- ◆ Run the car on the track until one tank of fuel has been consumed, then close the Needle-Valve 30° and run the car for another full tank of fuel. Repeat this procedure until 5 more tanks of fuel have been consumed, during which time the throttle may be opened for brief bursts of increased power. If the engine stops at medium speeds, close the Mixture Screw 45-90°.

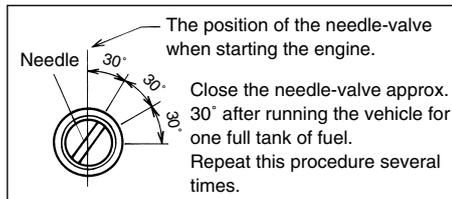

**Note:**


If the engine should need to be disassembled (e.g. for cleaning or minor parts replacement), it is advisable to return the needle-valve to the original rich, starting setting and check whether further running-in

time is required before the car is raced again. In the event of any major working parts (e.g. piston/cylinder liner assembly) being replaced or the fuel being changed, especially to high nitro fuel, the complete running-in should be repeated.

- ◆ To stop the engine, close the throttle to idle speed, then shut it off completely with the trim lever on the transmitter. To cut off the fuel supply, pinch the fuel delivery tube to the carburetor.

**Warning!**

Do not touch rotating parts, engine and silencer when stopping the engine as they become very hot, and contact with them may result in a serious burn.

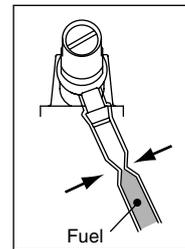

**FINAL ADJUSTMENT**

- Run the vehicle (with throttle fully open) over the longest available straight course, in order to observe the model's speed. Next return the car to the starting point, close the Needle-Valve 30° and repeat the run, taking note of the improvement in performance. Continue with further runs, gradually reducing the Needle-Valve setting and aiming to achieve the highest straight-line speed. Remember, however, that, if the Needle-Valve is shut down too far, the engine will overheat and, accompanied by visibly diminished exhaust smoke, the model will lose speed. At this point, throttle down immediately, stop the vehicle and reopen the Needle-Valve 30°.
- Having established the optimum Needle-Valve setting, check the Mixture Control Valve setting as follows.

- With the engine running, close the throttle and allow it to idle for about five seconds, then reopen the throttle fully. If, at this point, the engine puffs out an excessive amount of smoke and the vehicle does not accelerate smoothly and rapidly, it is probable that the idle mixture is too rich.
- In this case, turn the Mixture Control Valve in case of the 11L and the Metering Needle in case of the 11K clockwise 45 degrees. If, on the other hand, the engine tends to speed up momentarily and then cut out abruptly when the throttle is opened, the idle mixture is too lean. Correct this by turning the Mixture Control Valve in case of the 11L and the Metering Needle in case of the 11K counter-clockwise 45 degrees.

- Carry out adjustments patiently, under actual running conditions, until the engine responds quickly and positively to the throttle control.

**Warning!**

**Mixture adjustments (whether via the Mixture Control Valve, or the Needle-Valve) cannot be made accurately under 'no-load' conditions, which, in any case, are not advised, since such operation carries the risk of seriously damaging the engine through over-revving and overheating.**

- With the optimum mixture control position, light smoke is visible during high speed running, and the engine revolutions increase smoothly during acceleration. Remember that, if the engine is operated with the fuel/air mixture slightly too lean, it will overheat and run unevenly. As with all engines, it is advisable to set both needle-valve and mixture control screw very slightly on the rich side of the best rpm setting, as a safety measure.

- If the engine runs too fast with the throttle closed, the throttle stop screw should be turned counter-clockwise to allow the throttle opening to be reduced.

- Finally, beyond the nominal break-in period, a slight readjustment toward a leaner needle setting may be required to maintain performance.

---

## CARBURETOR CLEANLINESS

The correct functioning of the carburetor depends on its small fuel orifices remaining clear.


### ■ REALIGNMENT OF METERING NEEDLE AND MIXTURE CONTROL VALVE

In the course of making carburetor adjustments, it is just possible that the Metering Needle and the Mixture Control Valve may be inadvertently screwed in or out too far and thereby moved beyond its effective adjustment range.


22

The basic positions can be found by rotating the Metering Needle until its slotted head is flush with the ball link body.

#### ■ In case of the 11K carburetor

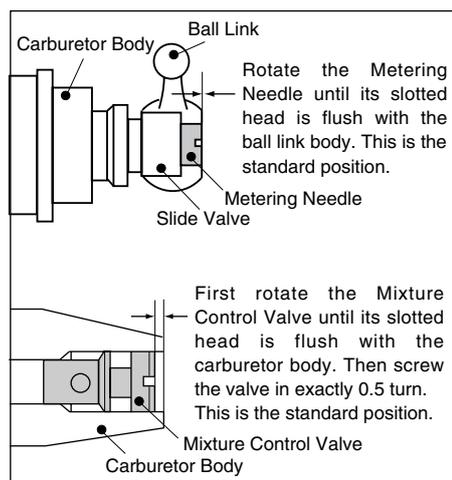

#### ■ In case of the 11L carburetor

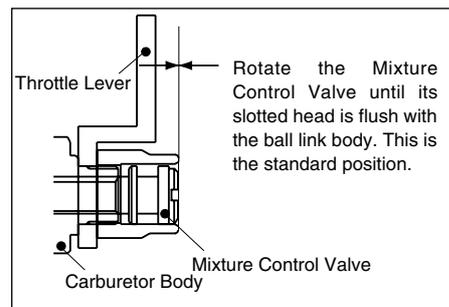

23

---

## CARE AND MAINTENANCE

1. The minute particles of foreign matter, that are present in any fuel may, by accumulating and partially obstructing fuel flow, cause engine performance to become erratic and unreliable. O.S. 'Super-Filters' (large and small) are available, as optional extras, to deal with this problem. One of these filters installed to the pickup tube inside your refueling container, will prevent the entry of foreign material into the fuel tank. It is also recommended that a good in-line filter be installed between the tank and carburetor.
2. Do not forget to clean the filters regularly to remove dirt and lint that accumulate on the filter screens. Also, clean the carburetor itself occasionally.
3. At the end of each operating session, drain out any fuel that may remain in the fuel tank. Afterwards, energize the glow-plug and try to restart the engine, to burn off any fuel that may remain inside the engine. Repeat this procedure until the engine fails to fire. Do this while the engine is still warm.

4. Then, inject some after-run oil into the engine, and rotate the engine with an electric starter for 4 to 5 seconds to distribute the oil to all the working parts.

### Note:

**Do not inject after-run oil into the carburetor as this may cause the O-rings inside the carburetor to deteriorate. These procedures will reduce the risks of starting difficulties or corrosion after a period of storage.**

5. Finally, when cleaning the exterior of the engine, use methanol or kerosene. Do not use gasoline or any solvent that might damage the silicone fuel tubing.


### Caution:

**The rear crankshaft bearing of this engine uses a special plastic retainer. If the front housing needs to be heated to remove or replace the bearing, do not allow the bearing to exceed 120°C (248°F), otherwise it may be damaged and rendered unserviceable.**

24

### ■ Installing Dust Caps

When storing the engine, install the cap on the exhaust port, carburetor, etc. to prevent dust from entering the engine.

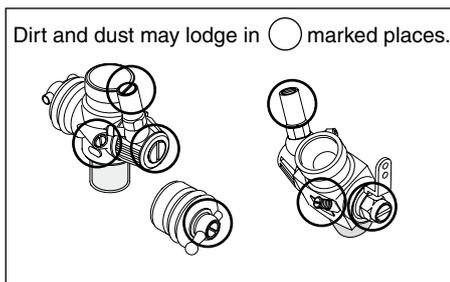

---

## CHECKING THE ENGINE

If the engine suffers a loss of performance after a long period of running it may be due to the wearing of parts. It is suggested that the worn parts be replaced when the following symptoms are detected.

- ◆ Engine sound changes and easily overheats.
- ◆ Power has dropped considerably.
- ◆ Idle is unstable and/or engine tends to stop at idle.

In most cases, ball bearings, cylinder & piston assembly, connecting rod and/or crankcase have become worn out or abnormal. Check the parts carefully and replace them if necessary.

25

<b>TROUBLE SHOOTING</b>		<b>Symptom</b>
		<b>Engine fails to fire.</b>
<b>Cause</b>	<b>Corrective action</b>	
Fuel tank is empty. Fuel not reaching the engine.	Fill the tank with fuel and repeat Priming procedure.	
Glowplug element is burnt out. Glowplug battery discharged	Replace glowplug. Recharge or replace the battery.	
Clogged fuel filter Air cleaner and silencer inside is dirty.	Clean or replace fuel filter. Replace cleaner element and clean inside silencer.	
Over priming	Remove glowplug and pump excess fuel.	
Fuel tubing is disconnected. Fuel tubing is kinked, split or has a hole.	Connect fuel tubing securely. Check the tubing carefully and replace if necessary.	
Incorrect servo linkage	Connect correctly after setting servo at neutral.	
Reverse rotating direction of starter box.	Make sure it rotates counter clockwise seen from crankshaft side.	
Recoil starter slips.	Inject cleaner spray into starter cord crevis on the body.	

26

<b>Symptom</b>	
<b>Engine fires intermittently but does not run.</b>	
<b>Cause</b>	<b>Corrective action</b>
Insufficient fuel in the tank.	Fill the tank with fuel.
Deteriorated glowplug	Replace glowplug.
Clogged fuel filter Air cleaner and silencer inside is dirty.	Clean or replace fuel filter. Replace cleaner element and clean inside silencer.
Engine overheated	Wait until engine is cool.
Incorrect clutch release	Adjust the tension of clutch spring.
Starting battery disconnected too soon.	Do not disconnect plug battery and wait until r.p.m. become stable.
Vibration causing air bubbles in fuel.	Install O rings to the tank screws to prevent bubbles.

27

<b>Symptom</b>	
<b>Unstable idle</b>	
<b>Cause</b>	<b>Corrective action</b>
Unsuitable glowplug	Use suggested glowplug in the instructions.
Unsuitable fuel	Do not use extremely high nitro or low oil content fuel.
Extremely light flywheel	Add suitable load.
Silencer is disconnected or has play	Install silencer securely.
<b>Symptom</b>	
<b>Not reaching expected peak r.p.m.</b>	
<b>Cause</b>	<b>Corrective action</b>
Insufficient warming up or running-in.	Set the needle only after warming up. Complete running-in.
Silencer or manifold is not securely connected or disconnected.	Replace seal ring. Check the connections and secure them.
Fuel tubing from tank is split or broken.	Replace the tubing.

28

<b>Symptom</b>	
<b>Poor response</b>	
<b>Cause</b>	<b>Corrective action</b>
Deteriorated glowplug	Replace glowplug.
Incorrect carburetor settings	Readjust low r.p.m. range with metering needle and mixture control valve.
Incorrect setting of transmitter Exponential function.	Check the transmitter setting.
Incorrect linkage	Make sure that throttle servo does not interfere servo linkage.
<b>Symptom</b>	
<b>Poor r.p.m. drop</b>	
<b>Cause</b>	<b>Corrective action</b>
Throttle position open too far.	Close metering needle to adequate position to lower idle r.p.m.
carburetor not fully seated	Install carburetor securely.
Metering needle closed too far.	Open the metering meedle a little.


29

## MAX-18TZ(P)-T ENGINE PARTS LIST

No.	Code No.	Description
1	21914010	Outer Head
2	21914110	Inner Head
3	21913010	Cylinder & Piston Assembly
4	21816000	Piston Pin
5	21817000	Piston Pin Retainer (2pcs.)
6	21915000	Connecting Rod
7	21982000	Carburetor Complete (Type 11K)
8	25381701	Carburetor Retainer Assembly
9	23731000	Crankshaft Ball Bearing (Front)
10	21911010	Crankcase
11	21931000	Crankshaft Ball Bearing (Rear)
12	21912010	Crankshaft
13	21824000	Gasket Set
14	21917000	Cover Plate
15	23763000	Screw Set
	71641300	Glow Plug P3
	21427200	Exhaust Seal Ring

The specifications are subject to alteration for improvement without notice.

## MAX-18TZ(P)-T ENGINE EXPLODED VIEW

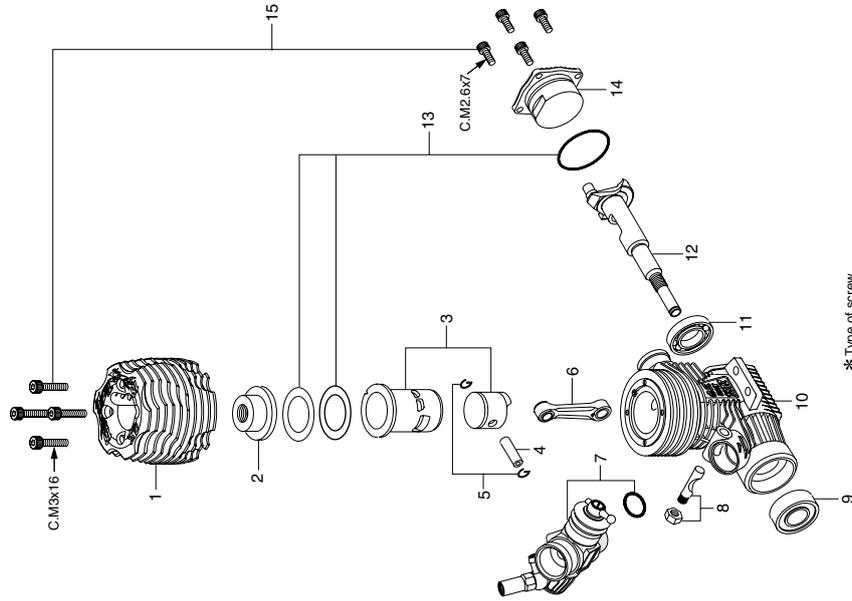


\* Type of screw  
 C...Cap Screw M...Oval Filler-Head Screw  
 F...Flat Head Screw N...Round Head Screw S...Set Screw

## MAX-18TZ-T ENGINE PARTS LIST

No.	Code No.	Description
1	21914010	Outer Head
2	21914110	Inner Head
3	21913010	Cylinder & Piston Assembly
4	21816000	Piston Pin
5	21817000	Piston Pin Retainer (2pcs.)
6	21915000	Connecting Rod
7	21884010	Carburetor Complete (Type 11L)
8	25381701	Carburetor Retainer Assembly
9	20810007	Propeller Nut
10	21458000	Drive Hub
11	23731000	Crankshaft Ball Bearing (Front)
12	21911010	Crankcase
13	21931000	Crankshaft Ball Bearing (Rear)
14	21912020	Crankshaft
15	21824000	Gasket Set
16	21917000	Cover Plate
17	23763000	Screw Set
	71641300	Glow Plug P3
	21427200	Exhaust Seal Ring

The specifications are subject to alteration for improvement without notice.

## MAX-18TZ-T ENGINE EXPLODED VIEW

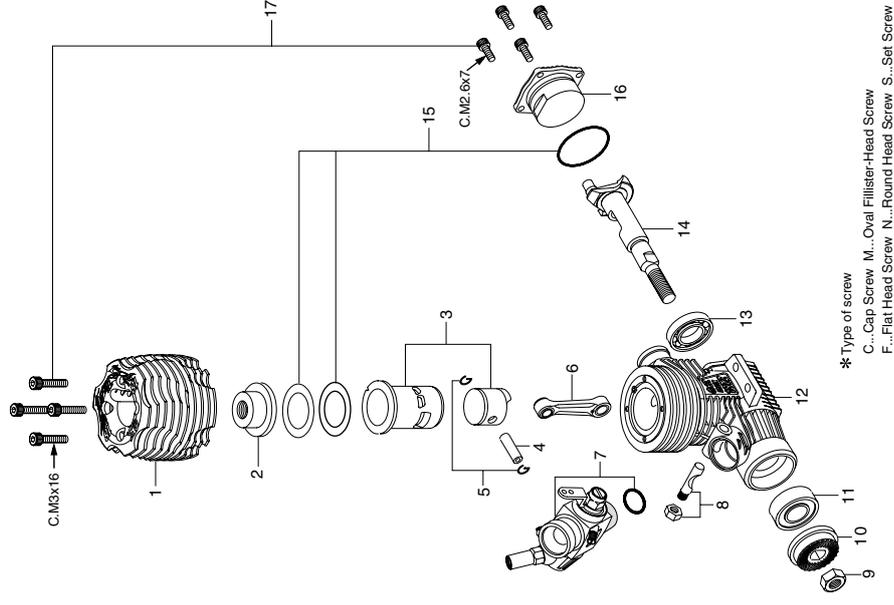


\* Type of screw  
 C...Cap Screw M...Oval Fillister-Head Screw  
 F...Flat Head Screw N...Round Head Screw S...Set Screw

## MAX-18TZ(S)-T ENGINE PARTS LIST

No.	Code No.	Description
1	21914010	Outer Head
2	21914110	Inner Head
3	21913010	Cylinder & Piston Assembly
4	21816000	Piston Pin
5	21817000	Piston Pin Retainer (2pcs.)
6	21915000	Connecting Rod
7	21884010	Carburetor Complete (Type 11L)
8	25381701	Carburetor Retainer Assembly
9	20810007	Propeller Nut
10	23731000	Crankshaft Ball Bearing (Front)
11	21911010	Crankcase
12	21931000	Crankshaft Ball Bearing (Rear)
13	21912030	Crankshaft
14	21824000	Gasket Set
15	21917000	Cover Plate
16	23763000	Screw Set
	71641300	Glow Plug P3
	21427200	Exhaust Seal Ring

The specifications are subject to alteration for improvement without notice.

## MAX-18TZ(S)-T ENGINE EXPLODED VIEW

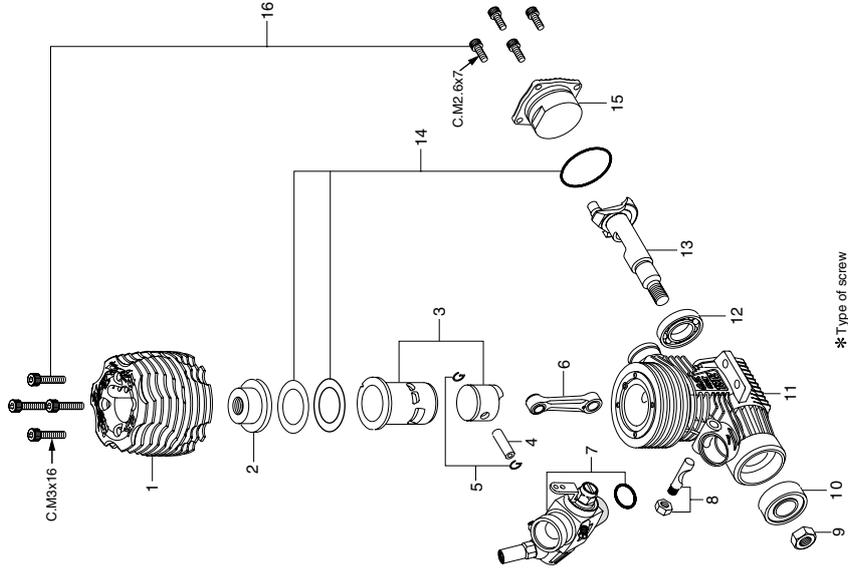


\*Type of screw  
 C...Cap Screw M...Oval Fillister-Head Screw  
 F...Flat Head Screw N...Round Head Screw S...Set Screw

## MAX-18TZ-TX ENGINE PARTS LIST

No.	Code No.	Description
1	21914010	Outer Head
2	21914110	Inner Head
3	21913010	Cylinder & Piston Assembly
4	21816000	Piston Pin
5	21817000	Piston Pin Retainer (2pcs.)
6	21915000	Connecting Rod
7	21884010	Carburetor Complete (Type 11L)
8	25381701	Carburetor Retainer Assembly
9	20810007	Propeller Nut
10	21458000	Drive Hub
11	23731000	Crankshaft Ball Bearing (Front)
12	21911010	Crankcase
13	21931000	Crankshaft Ball Bearing (Rear)
14	21912040	Crankshaft
15	21824000	Gasket Set
16	21922000	Starting Shaft
17	21901800	Rear Adaptor
18	73008000	No.N1 Recoil Starter Assembly
18-1	73008100	No.N1 Recoil Starter Body
18-2	73008200	No.N1 One-way Clutch
19	21923000	Screw Set
	71641300	Glow Plug P3
	21427200	Exhaust Seal Ring

The specifications are subject to alteration for improvement without notice.


## MAX-18TZ-TX ENGINE EXPLODED VIEW

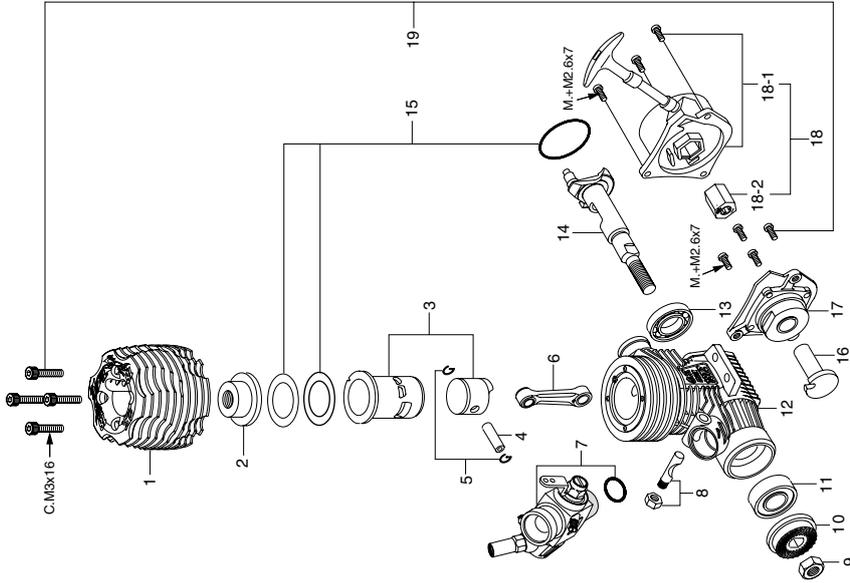

\*Type of screw

C...Cap Screw M...Oval Fillister-Head Screw  
F...Flat Head Screw N...Round Head Screw S...Set Screw

## 11K CARBURETOR EXPLODED VIEW

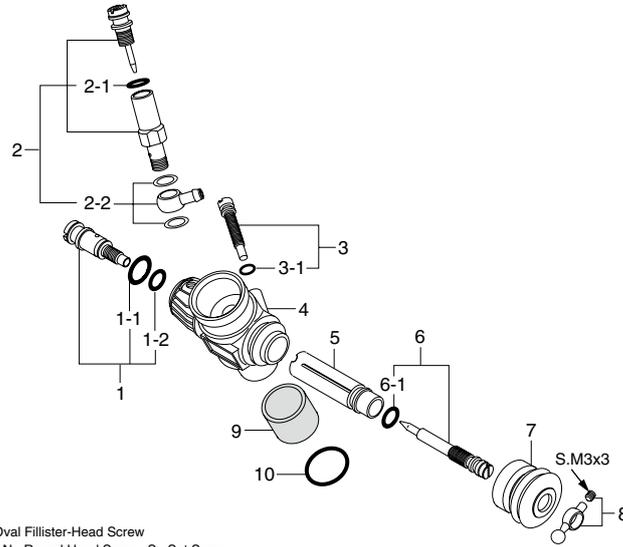

\* Type of screw

C...Cap Screw M...Oval Fillister-Head Screw  
F...Flat Head Screw N...Round Head Screw S...Set Screw

38


## 11K CARBURETOR PARTS LIST

No.	Code No.	Description
1	21982700	Mixture Control Valve Assembly
1-1	27881820	"O" Ring(L) (2pcs.)
1-2	22781800	"O" Ring(S) (2pcs.)
2	21285901	Needle Valve Assembly
2-1	27881820	"O" Ring (2pcs.)
2-2	21881950	No.14 Universal Nipple Assembly
3	21982620	Throttle Stop Screw
3-1	22781800	"O" Ring(S) (2pcs.)
4	21982100	Carburetor Body (w/Thermo Insulator)
5	21982210	Slide Valve
6	21982540	Metering Needle Assembly
6-1	22781800	"O" Ring(S) (2pcs.)
7	21982520	Dust Cover
8	23818430	Ball Link No.5
9	21982900	Thermo Insulator
10	22615000	Carburetor Rubber Gasket

The specifications are subject to alteration for improvement without notice.

39

## 11L CARBURETOR EXPLODED VIEW

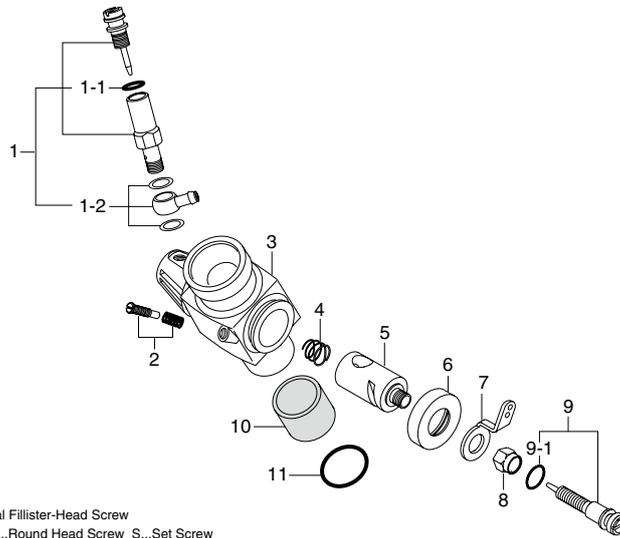

40

## 11L CARBURETOR PARTS LIST

No.	Code No.	Description
1	21285901	Needle Valve Assembly
1-1	27881820	"O" Ring (2pcs.)
1-2	21881950	No.14 Universal Nipple Assembly
2	22681310	Throttle Stop Screw
3	21884110	Carburetor Body (w/Thermo Insulator)
4	22481506	Rotor Spring
5	21884200	Carburetor Rotor
6	21283210	Dust Cover
7	22681419	Throttle Lever
8	21481420	Throttle Lever Fixing Nut
9	21982630	Mixture Control Screw
9-1	27881820	"O" Ring (2pcs.)
10	21982900	Thermo Insulator
11	22615000	Carburetor Rubber Gasket

The specifications are subject to alteration for improvement without notice.

## O.S. GENUINE PARTS & ACCESSORIES



### ■ O.S. Glow Plug

- **P6**  
(71641600)

- **P7**  
(71641700)

- **P8**  
(71641800)



### ■ Exhaust Manifold Assembly

- **M1001** (72106420)  
Left side exhaust,  
Joint tube type

- Manifold Spring  
(72106172)

- **M1010** (72103180)  
Right side exhaust,  
Joint tube type

- Manifold Spring  
(72106172)

- **M1001SC** (72106400)  
Left side exhaust,  
Spring connect type

- Manifold Spring  
(72106172)

- **M1011SC** (72106410)  
Right side exhaust,  
Spring connect type

- Manifold Spring  
(72106172)

### ■ Tuned Silencer

#### ■ Joint tube type

- **T-1040 L52**

- (72103051)  
Left side exhaust

- **T-1040 R52**

- (72103056)  
Right side exhaust

- **T-1040 L60**

- (72106340)  
Left side exhaust

- **T-1040 R60**

- (72106350)  
Right side exhaust

### ■ Spring connect type

- **T-1050SC L52 Tuned Silencer Assembly**

- (72106600)  
Left side exhaust

- Exhaust Seal Ring (2pcs.)  
(22826140)

- Joint Spring (3pcs.)  
(72106042)

- **T-1040SC R52 Tuned Silencer Assembly**

- (72106320)  
Right side exhaust

- Tuned Silencer Body  
(72106321)

- Exhaust Seal Ring (2pcs.)  
(22826140)

- Joint Spring (3pcs.)  
(72106042)

- **T-1040SC L60 Tuned Silencer Assembly**

- (72106360)  
Left side exhaust

- Tuned Silencer Body  
(72106361)

- Exhaust Seal Ring (2pcs.)  
(22826140)

- Joint Spring (3pcs.)  
(72106042)

- **T-1040SC R60 Tuned Silencer Assembly**

- (72106370)  
Right side exhaust

- Tuned Silencer Body  
(72106371)

- Exhaust Seal Ring (2pcs.)  
(22826140)

- Joint Spring (3pcs.)  
(72106042)

## O.S. GENUINE PARTS & ACCESSORIES



### ■ T-1050SC L52 Complete Set

(72106700)

- T-1050SC L52  
Tuned Silencer Assembly  
(72106600)

- M1001SC Exhaust  
Manifold Assembly  
(72106400)

- Exhaust Seal Ring (2pcs.)  
(21427200)

### ■ T-1040SC R52 Complete Set

(72106510)

- T-1040SC R52  
Tuned Silencer Assembly  
(72106320)

- M1011SC Exhaust  
Manifold Assembly  
(72106410)

- Exhaust Seal Ring (2pcs.)  
(21427200)

### ■ T-1040SC L60 Complete Set

(72106520)

- T-1040SC L60  
Tuned Silencer Assembly  
(72106360)

- M1001SC Exhaust  
Manifold Assembly  
(72106400)

- Exhaust Seal Ring (2pcs.)  
(21427200)

### ■ T-1040SC R60 Complete Set

(72106530)

- T-1040SC R60  
Tuned Silencer Assembly  
(72106370)

- M1011SC Exhaust  
Manifold Assembly  
(72106410)

- Exhaust Seal Ring (2pcs.)  
(21427200)

### ■ Super Air Cleaner 202 Assembly

On-road Type  
(72412000)

- 202 Cleaner Body  
(72412100)

- 202 Filter Element (4pcs.)  
(72412200)



### ■ SUPER AIR CLEANER 203

(72413000)

- **203 Filter Element (4pcs.)**  
(72413200)



## O.S. GENUINE PARTS & ACCESSORIES

**O.S. SPEED**  
RACING ENGINE PARTS

■ **Engine Mount Spacer**  
(72404000)

■ **Exhaust Seal Ring (2pcs.)**  
(21427200)

■ **Dust Cap Set**

- 3mm (5pcs.) (73300305)
- 8mm (3pcs.) (73300812)
- 16mm (3pcs.) (73301612)
- 18mm (3pcs.) (73301812)

■ **Super Joint Tube 15**  
(72103310)




■ **Cap Screw Set**  
(10pcs.)

- **M2.6x7**  
(79871020)
- **M3x16**  
(79871160)



■ **Long Socket Wrench**  
With Plug Grip  
(71521000)

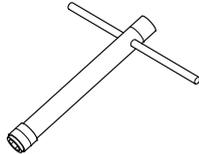




The specifications are subject to alteration for improvement without notice.

44

## 18TZ(P)-T THREE VIEW DRAWING

### SPECIFICATIONS

■ Displacement	3.0 cc (0.183 cu.in.)
■ Bore	16.0mm (0.629 in.)
■ Stroke	15.0mm (0.590 in.)
■ Practical R.P.M.	3,000-34,000 r.p.m.
■ Power output	1.8 ps / 1.83 hp / 29,000 r.p.m.
■ Weight	225.8g (7.96oz.)

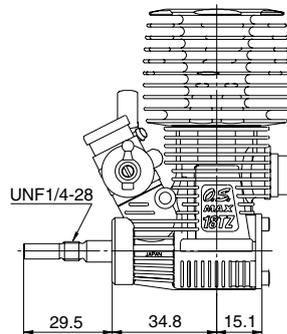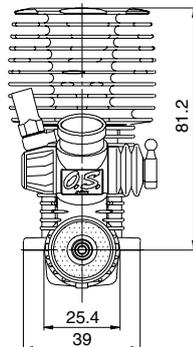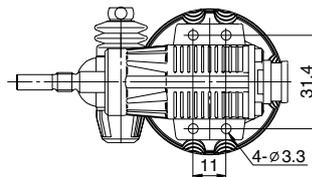




Dimensions (mm)

45

## 18TZ-T THREE VIEW DRAWING

### SPECIFICATIONS

■ Displacement	3.0 cc (0.183 cu.in.)
■ Bore	16.0mm (0.629 in.)
■ Stroke	15.0mm (0.590 in.)
■ Practical R.P.M.	3,000-34,000 r.p.m.
■ Power output	1.8 ps / 1.83 hp / 29,000 r.p.m.
■ Weight	224.8g (7.93oz.)

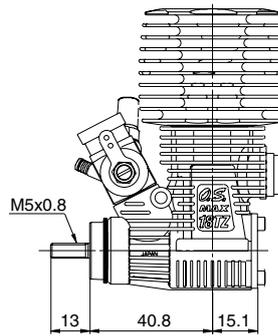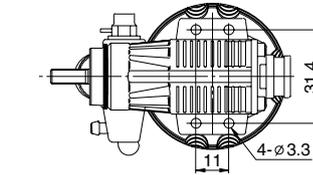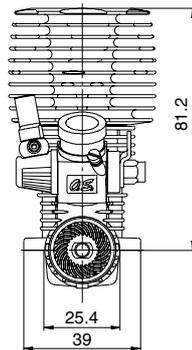




Dimensions (mm)

46

## 18TZ(S)-T THREE VIEW DRAWING

### SPECIFICATIONS

■ Displacement	3.0 cc (0.183 cu.in.)
■ Bore	16.0mm (0.629 in.)
■ Stroke	15.0mm (0.590 in.)
■ Practical R.P.M.	3,000-34,000 r.p.m.
■ Power output	1.8 ps / 1.83 hp / 29,000 r.p.m.
■ Weight	222.4g (7.84oz.)

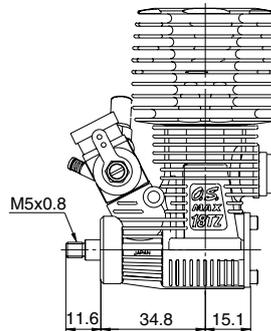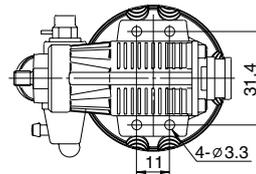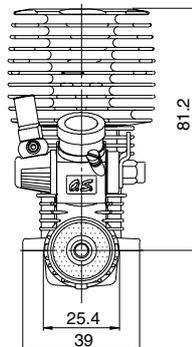


Dimensions (mm)

47

## 18TZ-TX THREE VIEW DRAWING

### SPECIFICATIONS

■ Displacement	3.0 cc (0.183 cu.in.)
■ Bore	16.0mm (0.629 in.)
■ Stroke	15.0mm (0.590 in.)
■ Practical R.P.M.	3,000-34,000 r.p.m.
■ Power output	1.8 ps / 1.83 hp / 29,000 r.p.m.
■ Weight	263.7g (9.30oz.)

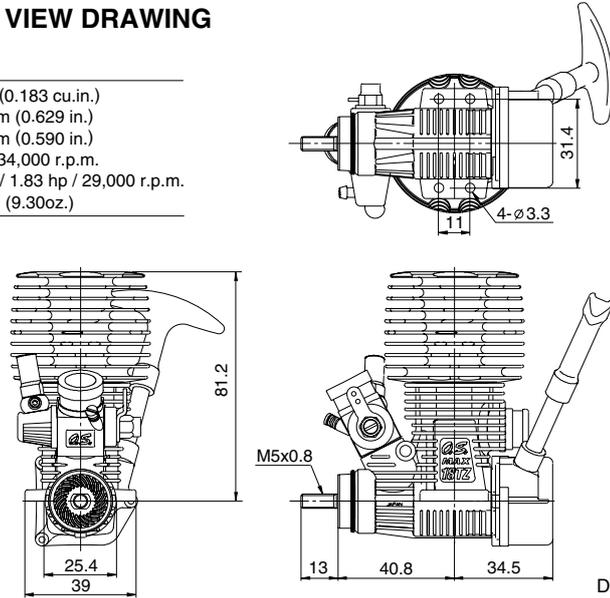

48



**O.S. ENGINES** MFG.CO.,LTD.

6-15 3-Chome Imagawa Higashiumiyoshi-ku

Osaka 546-0003, Japan TEL. (06) 6702-0225

FAX. (06) 6704-2722

URL : <http://www.os-engines.co.jp>