


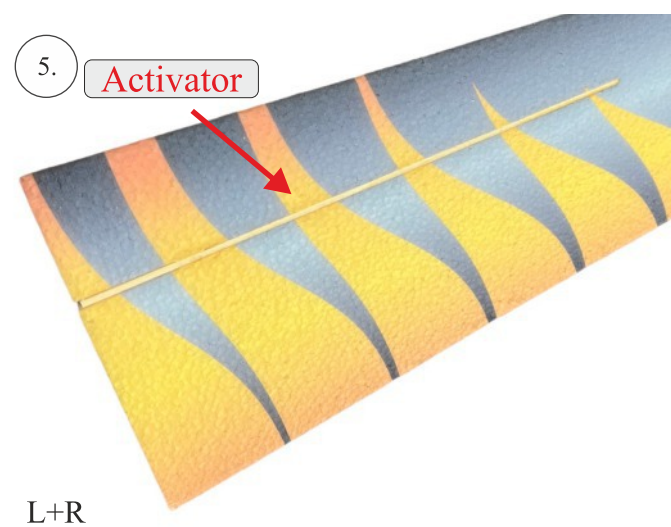
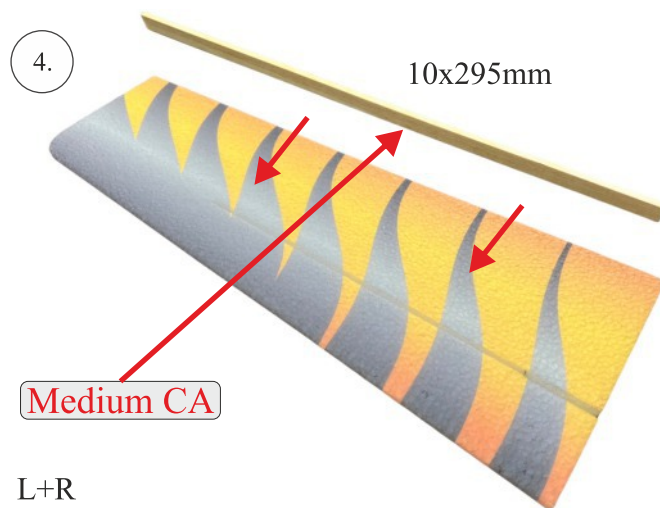
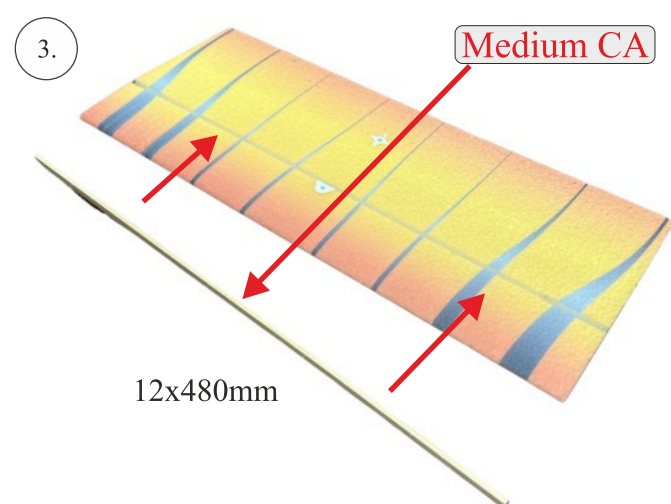


Termik

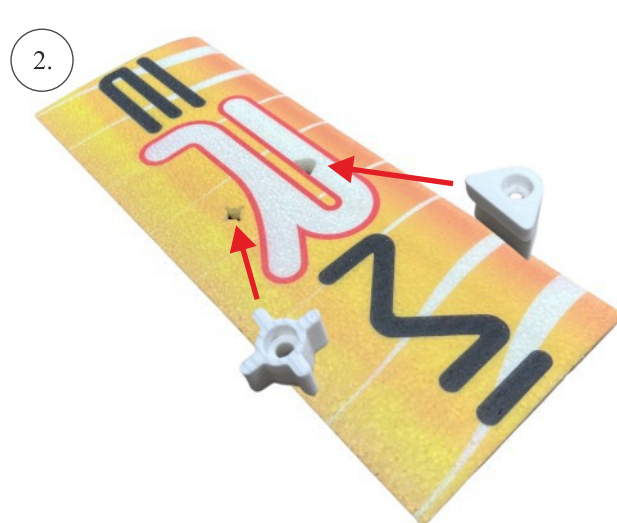


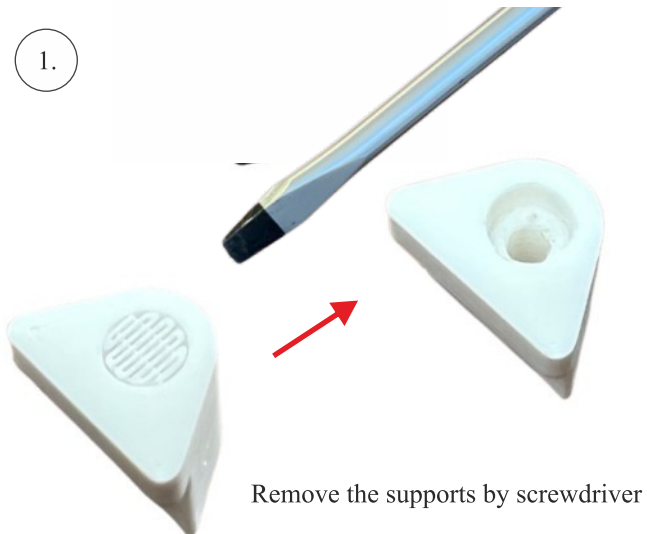

9.

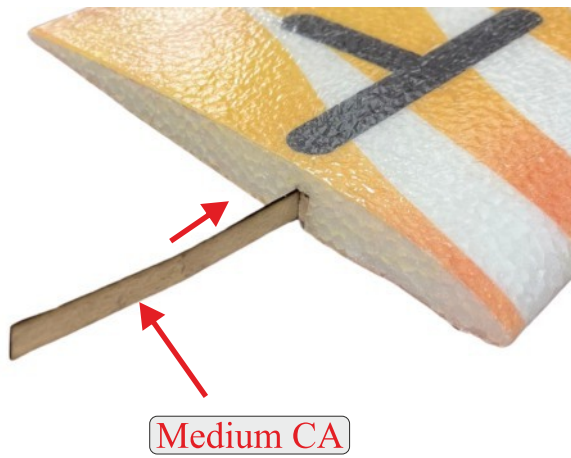


10.

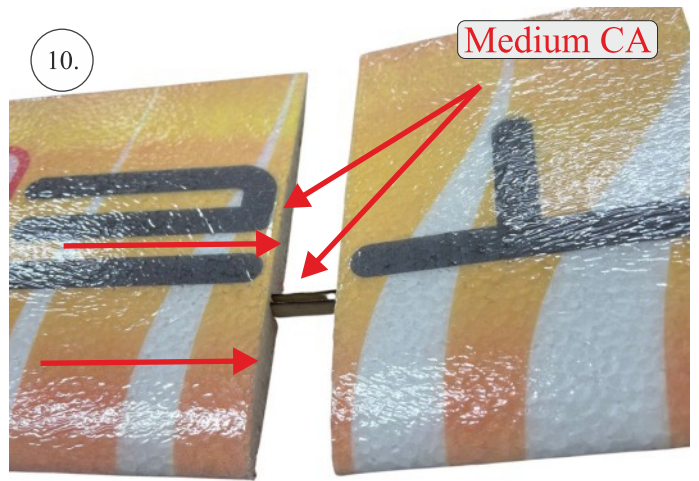

11.



12.

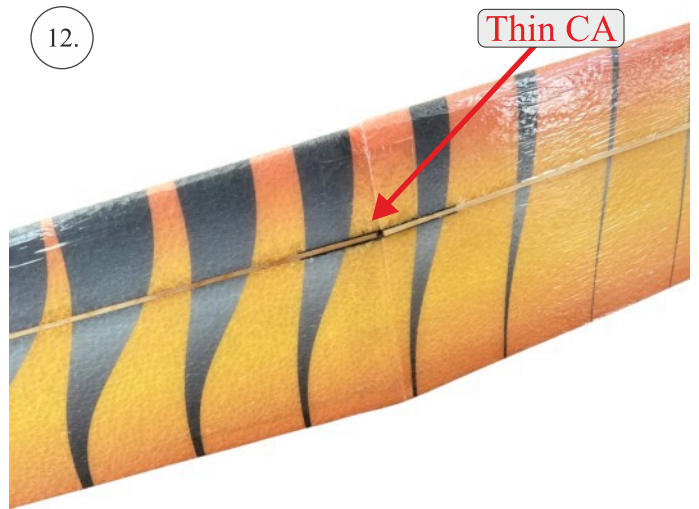


13.


you can cover the join by foil




14.





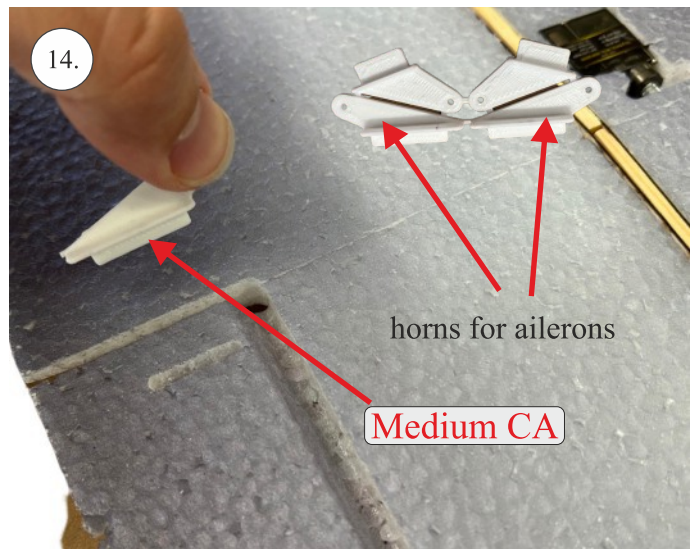


15.

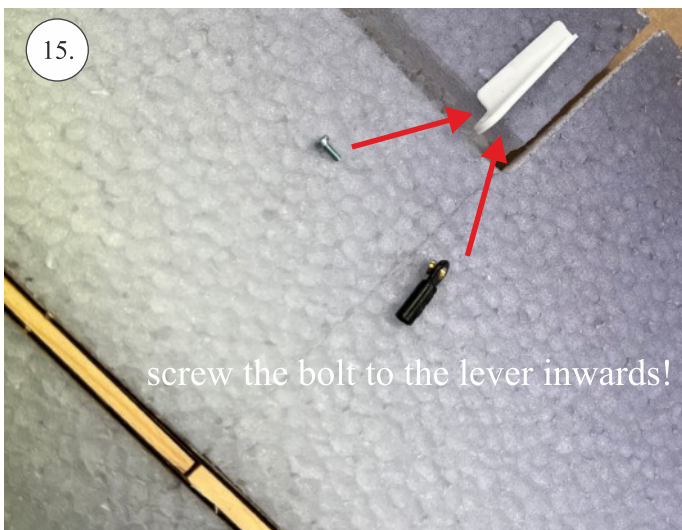


16.

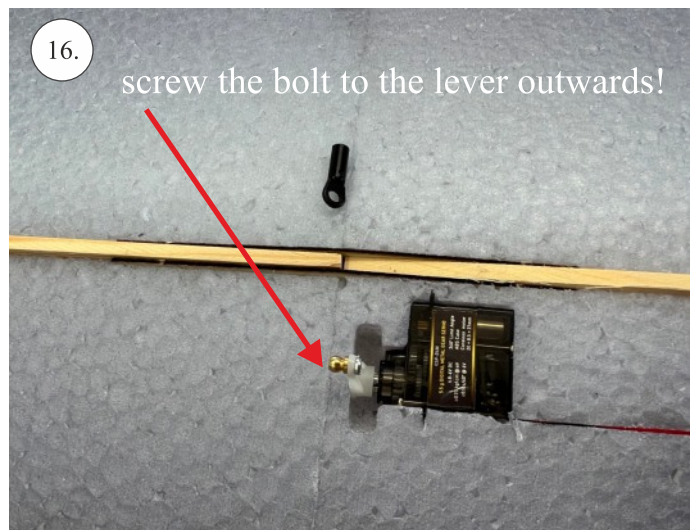

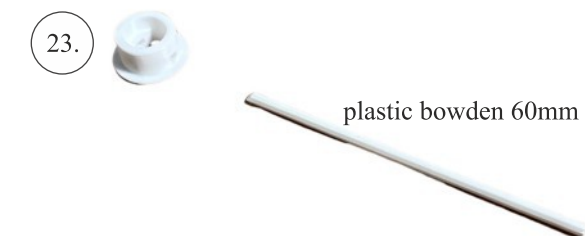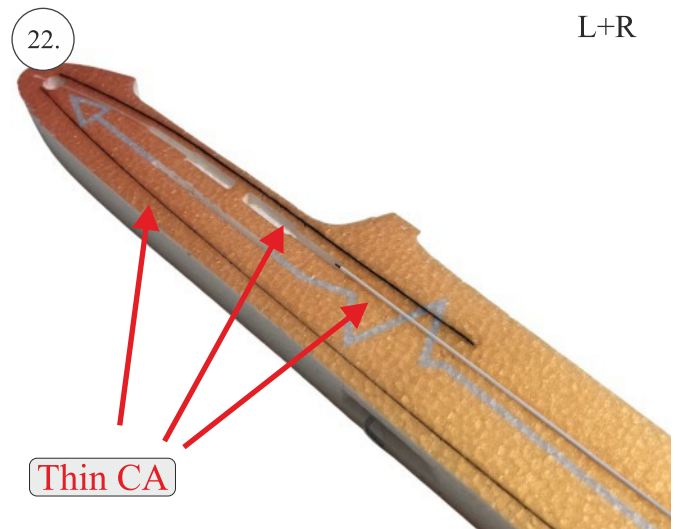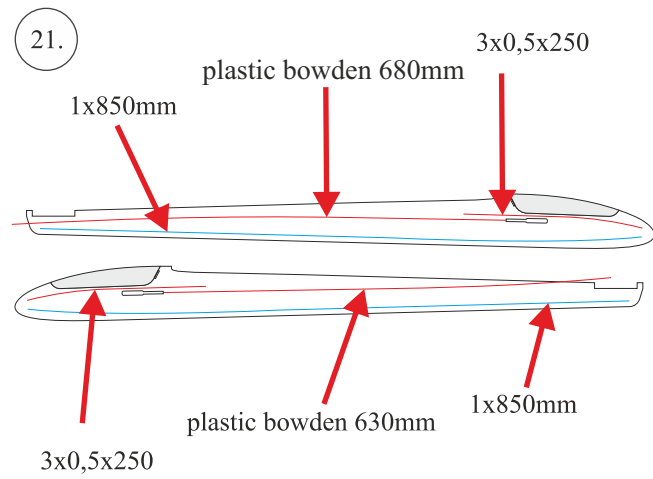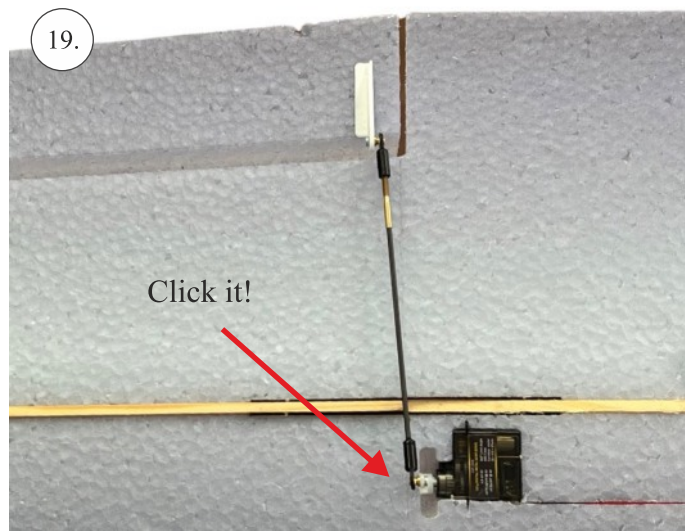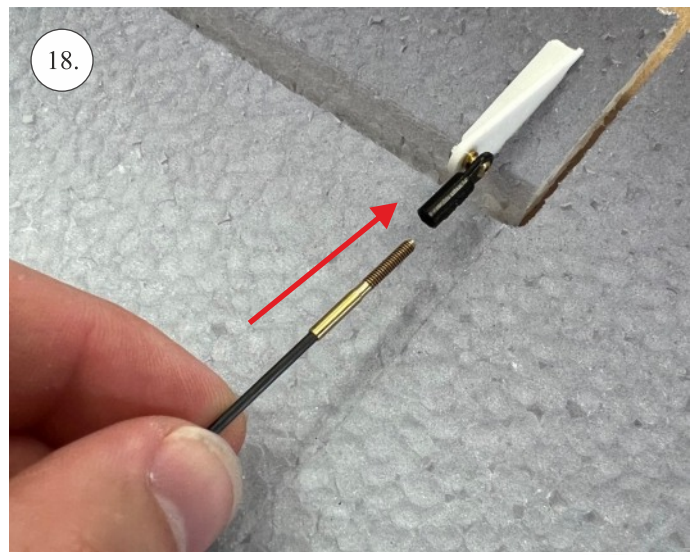


24.

Thin CA

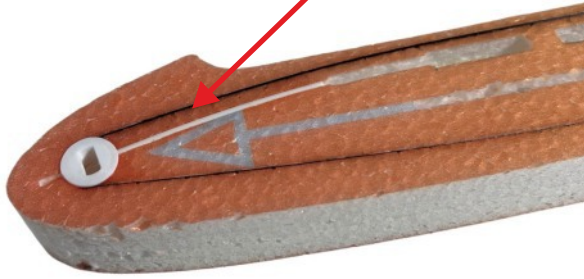


25.

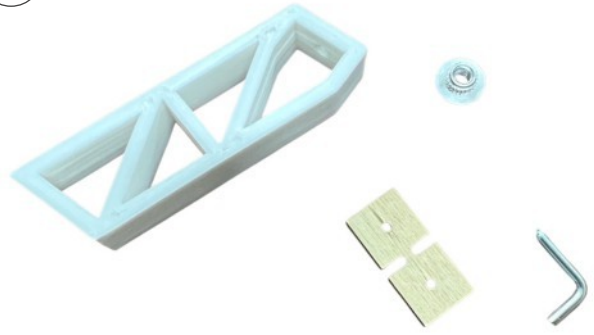


26.

Medium CA

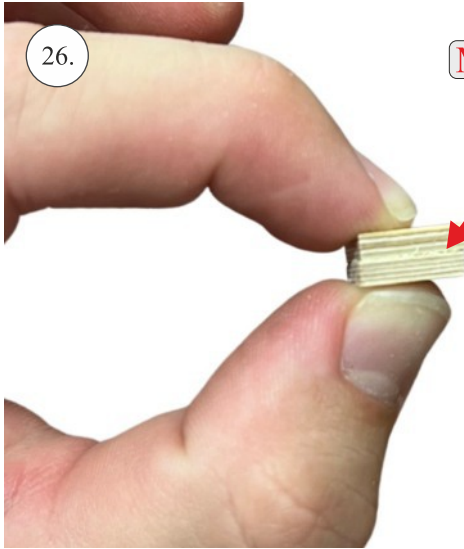

27.


Medium CA

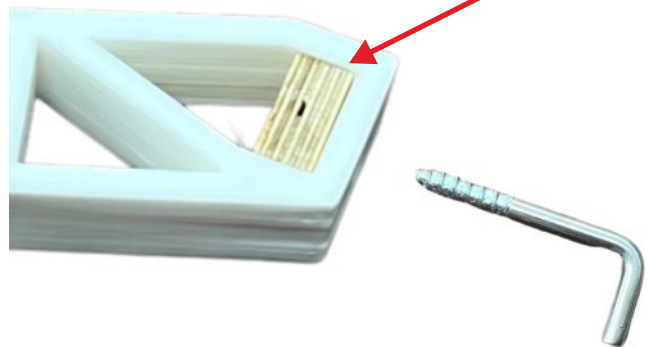

28.

use pliers for the 4mm nut

Medium CA

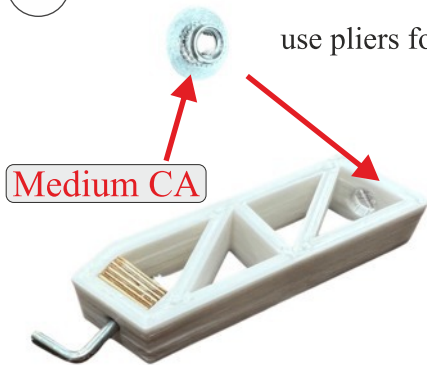


29.



30.

Medium CA

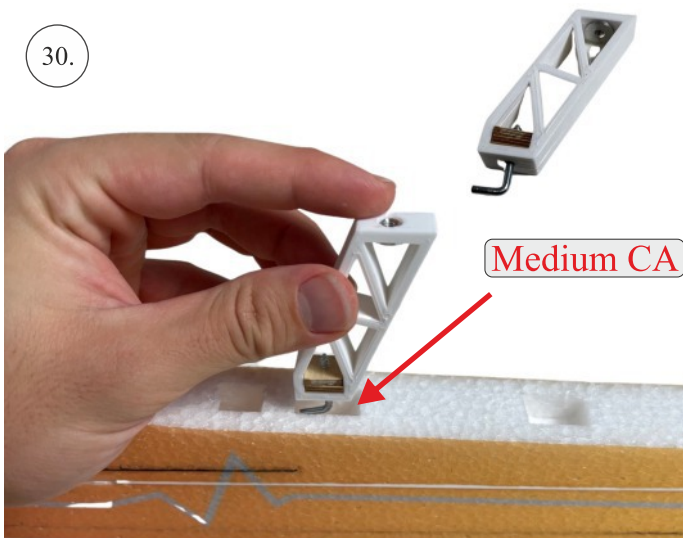

31.

be careful whether it is in the same line



32.

Medium CA

use pliers for the 4mm nut

33.

Medium CA

34.

35.

this hole to the tail

36.

put the servos in the fuselage

2nd
1st

Thin CA

37.

all parts are ready for foil ironing


38.

39.

higher horns put in the holes

Medium CA

do not leave the places that will be glued covered with foil

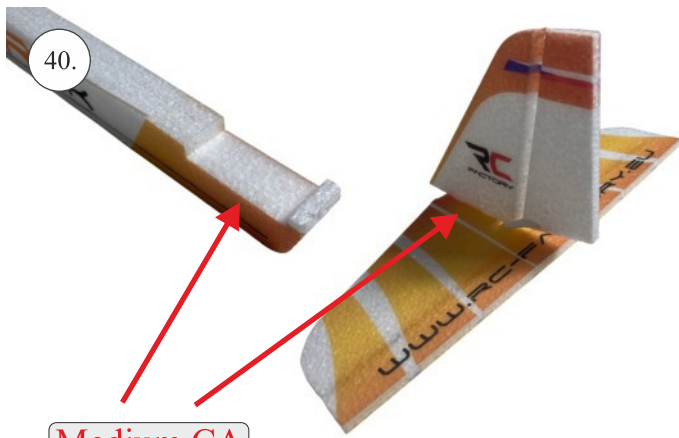


Medium CA



The first step to glue the rudder to elevator
The second step glue the tail to the fuselage



Medium CA

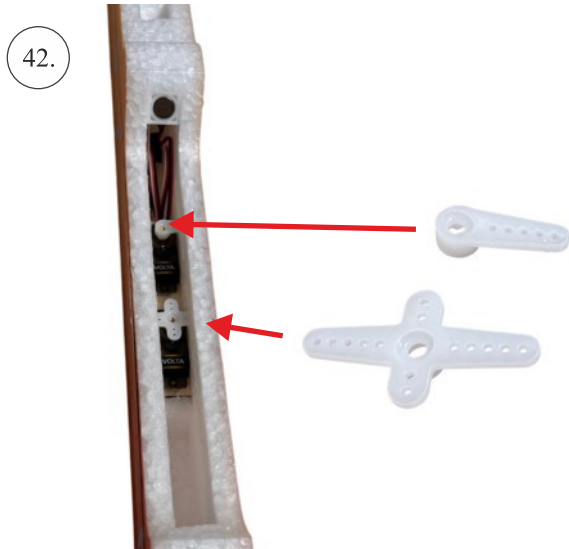


Medium CA

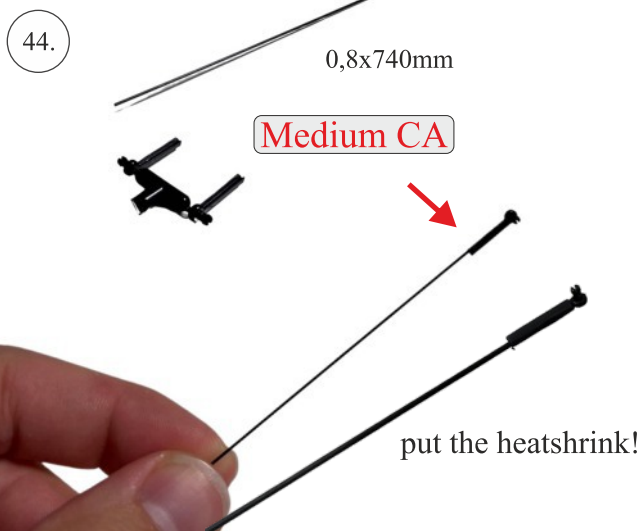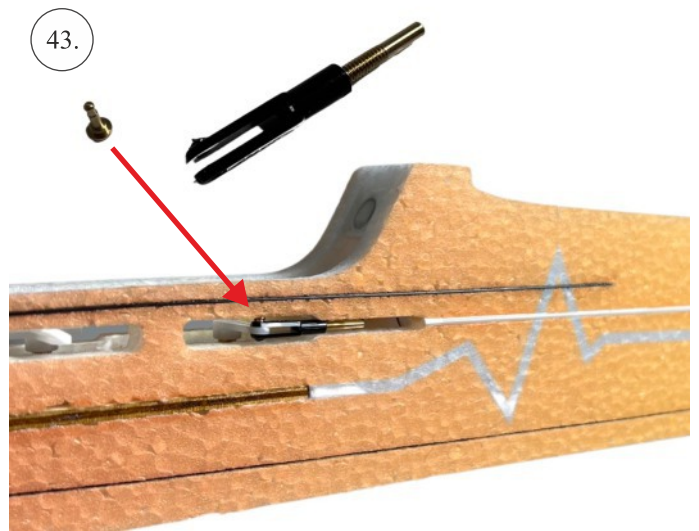


Medium CA


put the heatshrink!

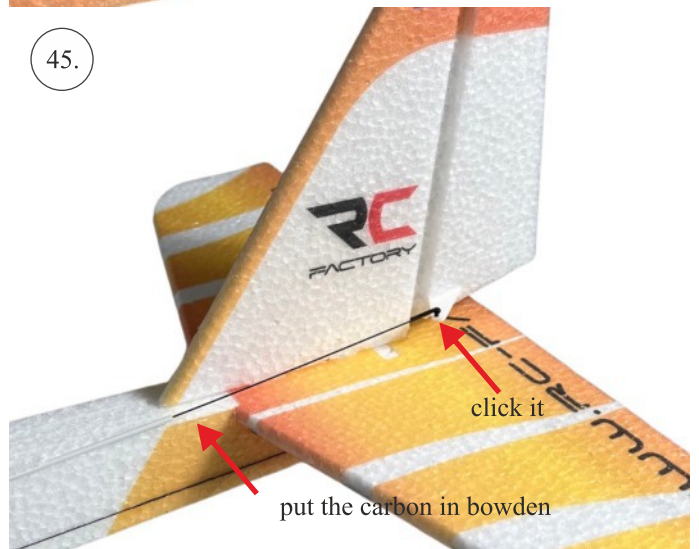

click it
put the carbon in bowden

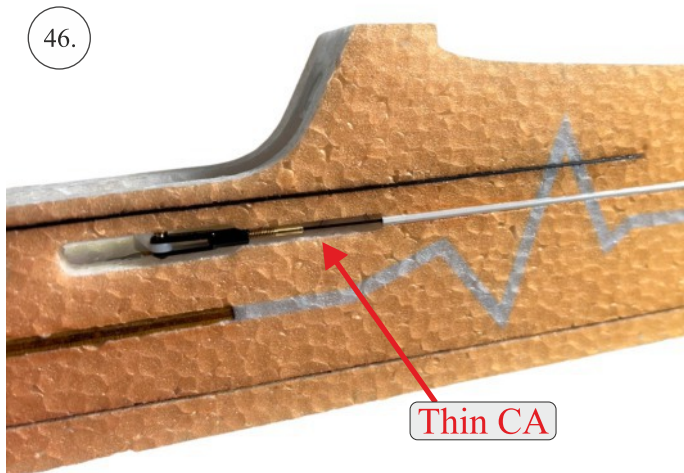


Thin CA

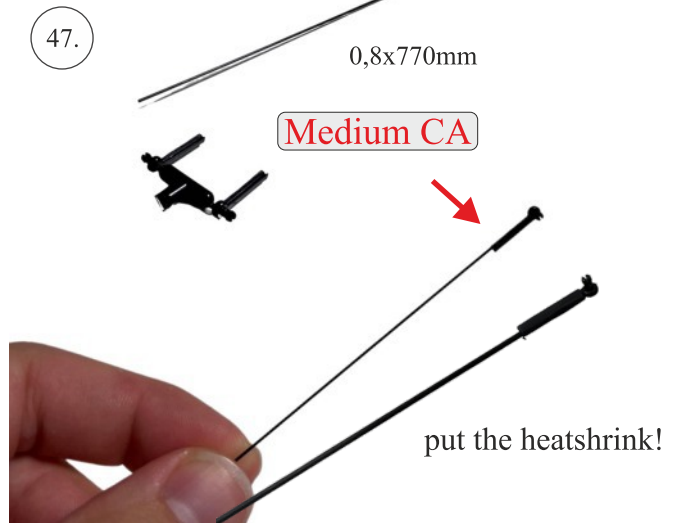


Medium CA

put the heatshrink!


48.

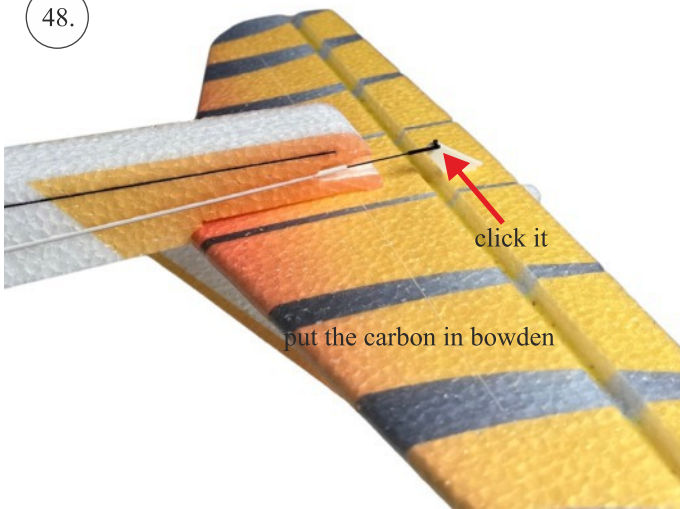


49.

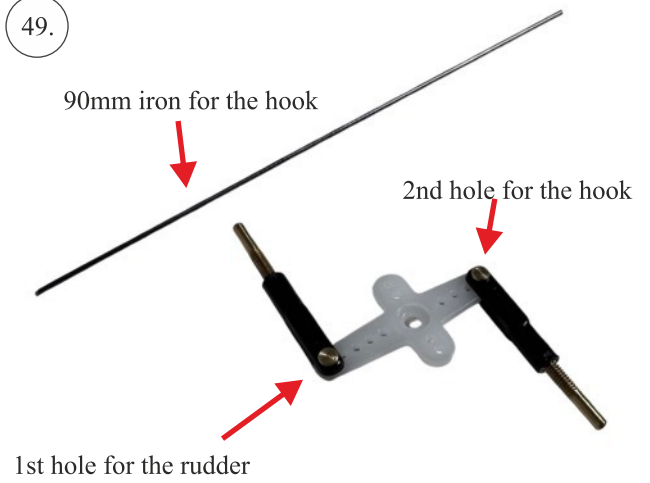

50.

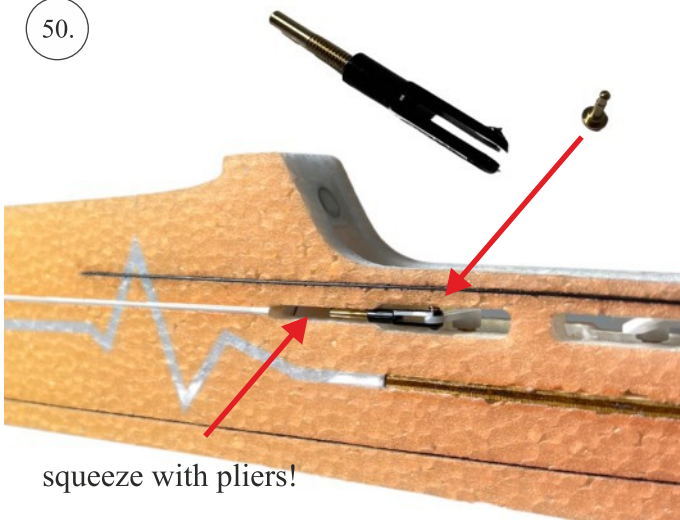


51.

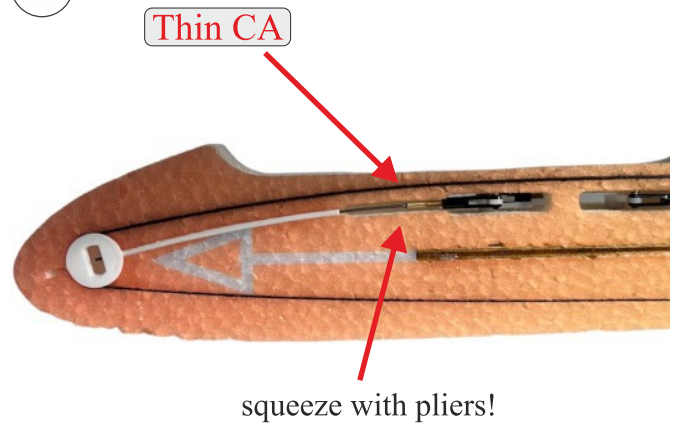



52.




53.

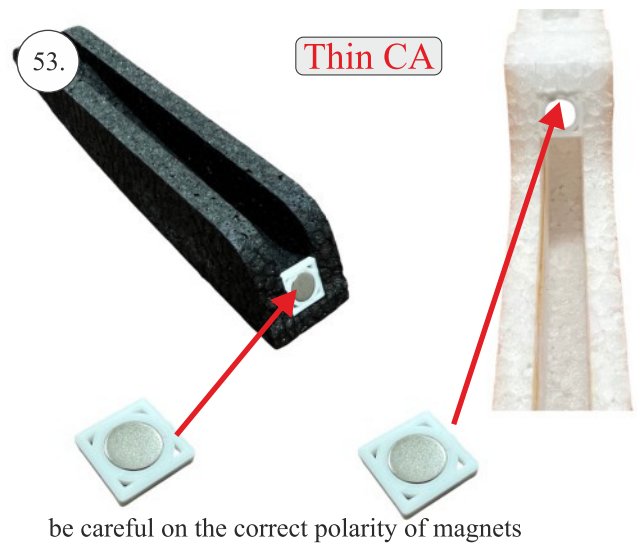

54.

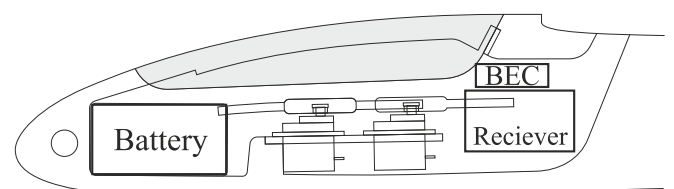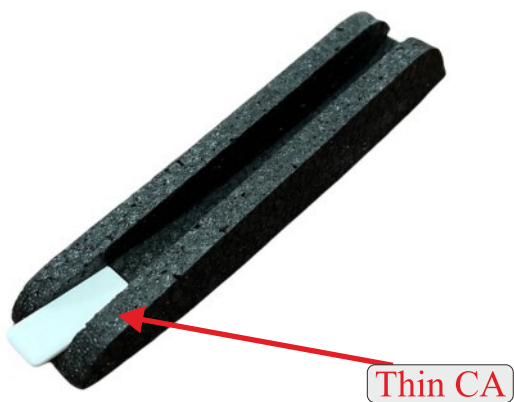

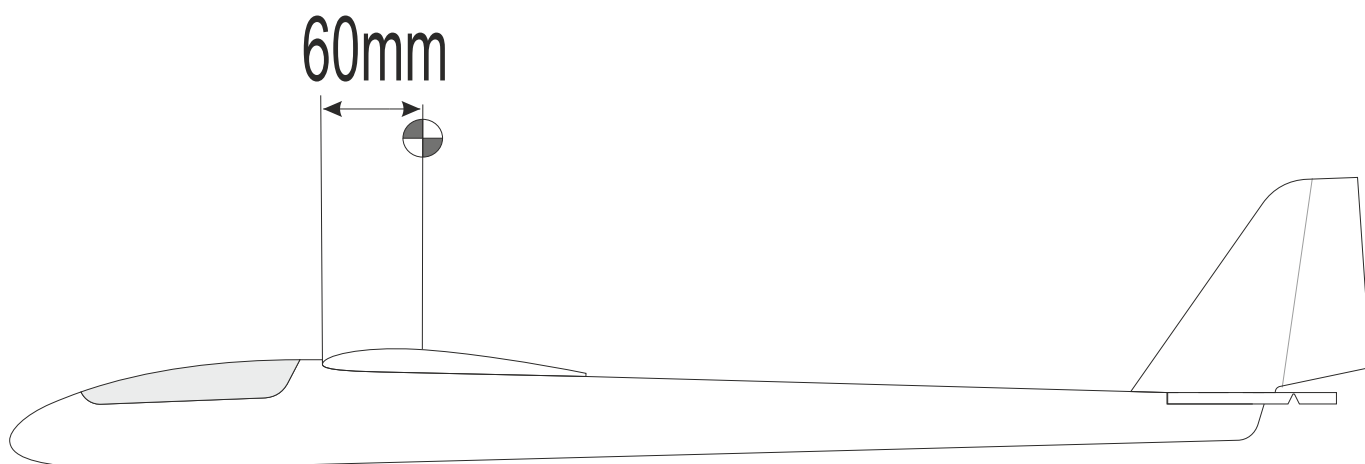

We wish you many happy flying hours with the Termik.

Your RC Factory team